

## Kia / Genesis 2.0 Turbo JB4

Last updated 4/1/2024

Use subject to terms and conditions posted at <http://www.burgertuning.com/terms.html>


THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW, AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




OPTIONAL JB4 APP SHOWN

Open the hood, lock the doors, place your key far enough from the car not to wake it up, and wait 5 min for the vehicle's computer to go to sleep.


Remove the engine cover by pulling up on the front edge to release the rubber grommets from their stand-off mounting points.

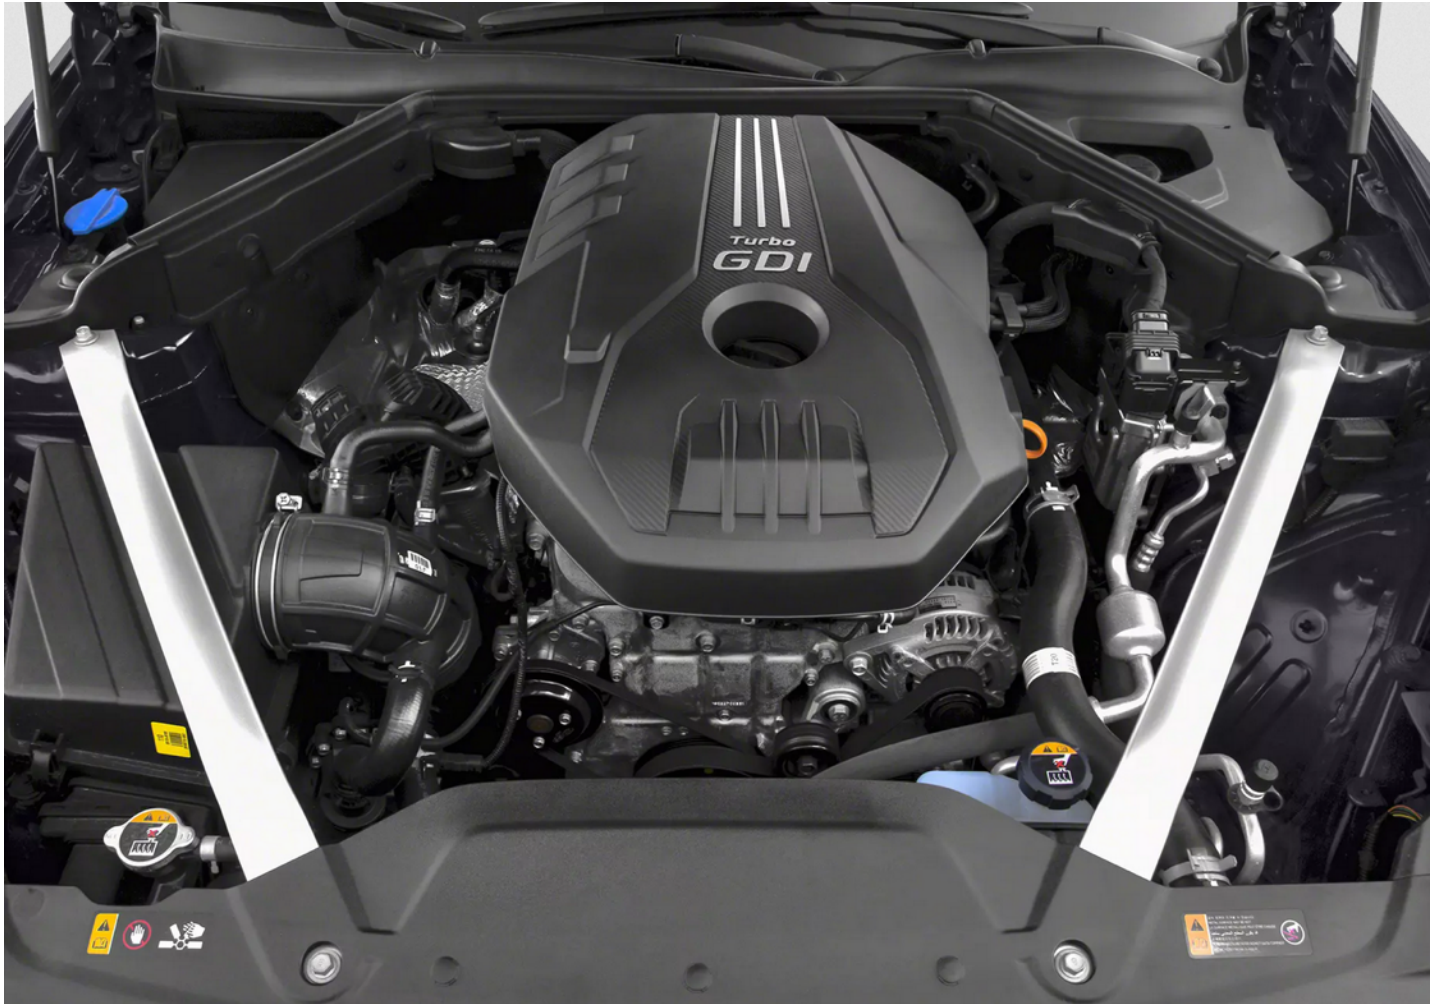


The JB4 harness has two similar looking connectors on it for. The one with the rainbow colored wires will attach to the TMAP sensor in the front of the engine, while the one with the brown wires will attach to the MAP sensor on the back of the intake manifold. You'll unplug the factory sensor, plug the JB4 harness plug in, and plug the factory plug back in to the matching JB4 harness plug completing the loop.

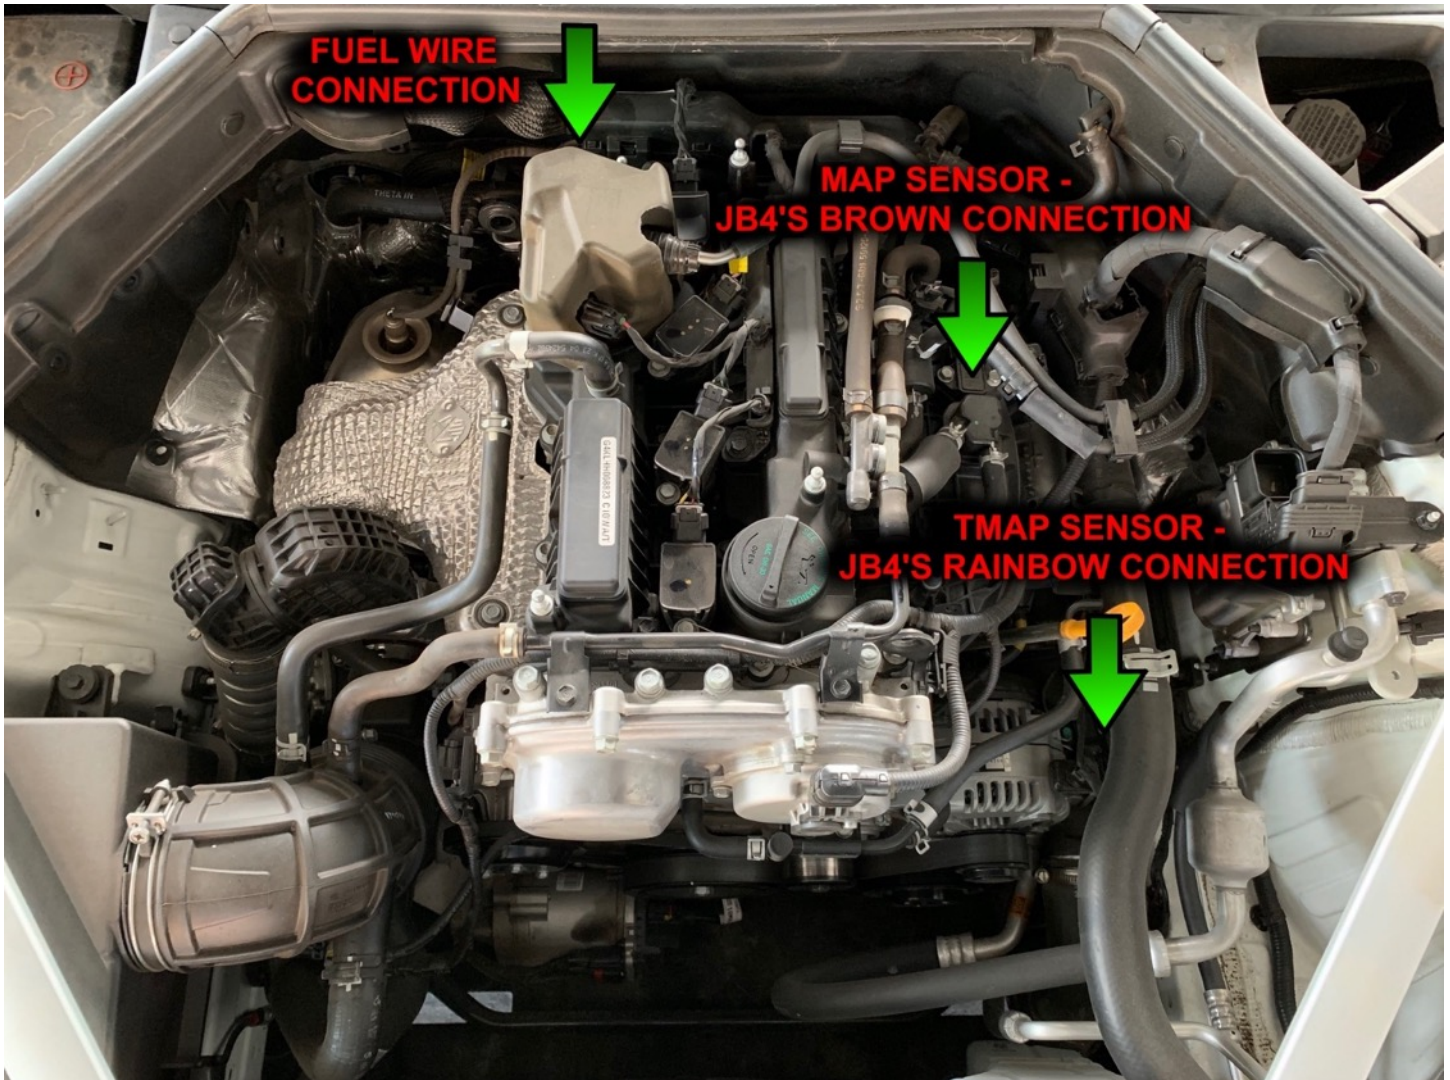

Attach the rainbow connection to the TMAP sensor on the charge piping:

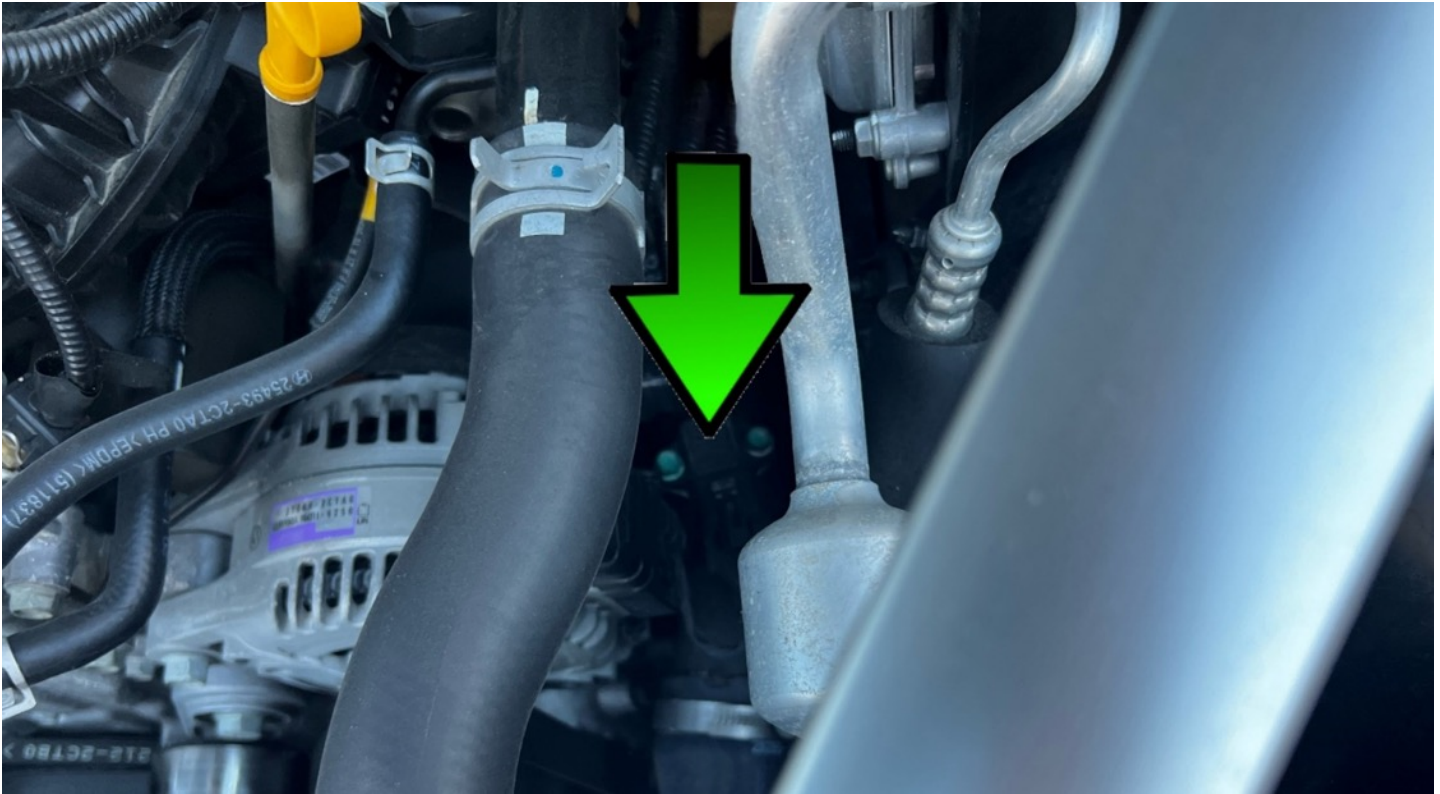

Attach the brown connection to the MAP sensor on the intake manifold:

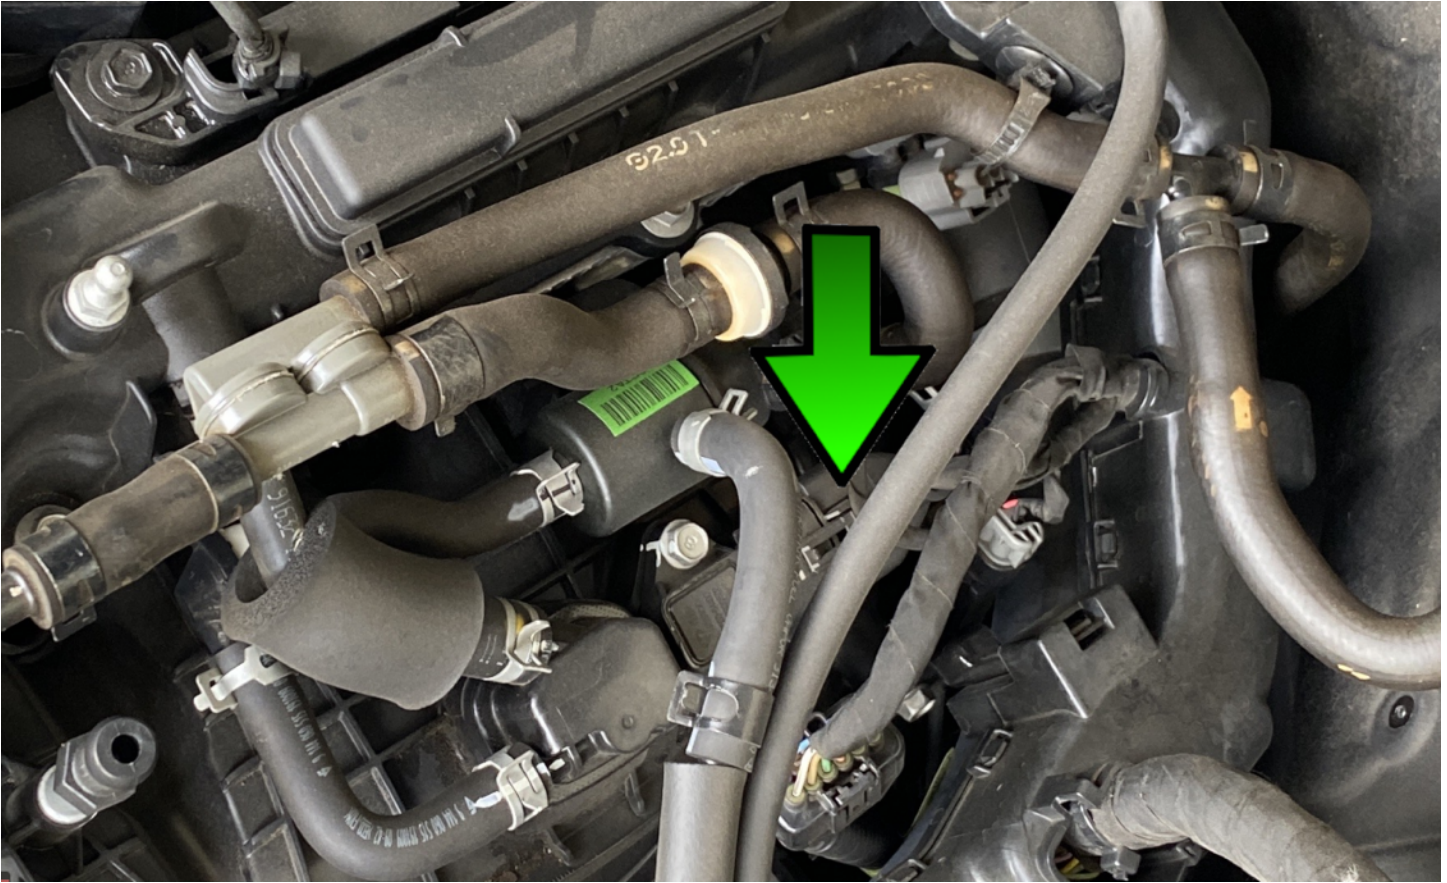


It is essential to route the JB4's harness away from hot objects in the engine compartment as the wiring can be damaged by heat, which may prevent the vehicle from running properly. If necessary, secure the harness with zip ties or other fastening devices to prevent the harness from touching any hot objects.

Finally, place the control box as shown. Shown with optional JB4 Mobile adapter attached. Note attaching JB4 mobile to the metal enclosure may reduce its range so best to leave it detached.



The optional OBDII cable unlocks full CANbus control for the most advanced tuning and logging features and is strongly suggested. The cable can be routed the “quick” way through the door jamb or the “clean” way through the firewall detailed below.

Plug the cable in to the OBDII port and using a screwdriver slightly push out the grommet as shown. Pass the wire in to the engine bay, and then push the grommet back in from the engine side.

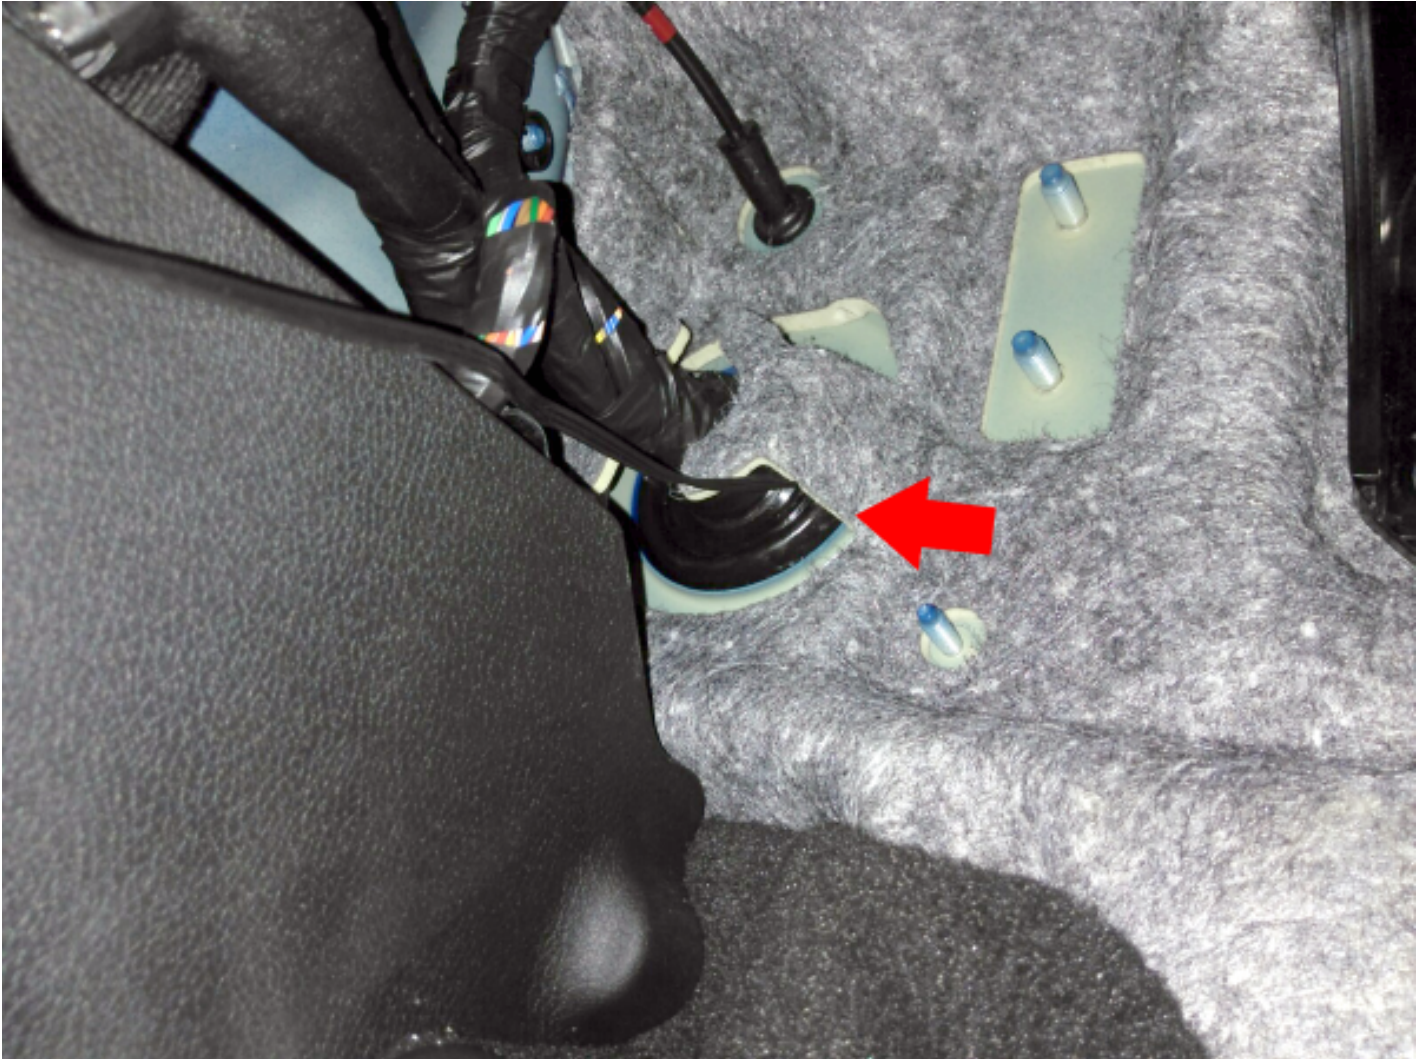


Remove the brake booster cover by popping up the 3 plastic locks that hold it down, reach down and pull the OBDII wire up.





Route the cable across the cowl tucking it under the rubber grommet and plug it in to the 2 position matching connector near the JB4 control box. The latch on the connector must line up with the clip for CANbus to operate.

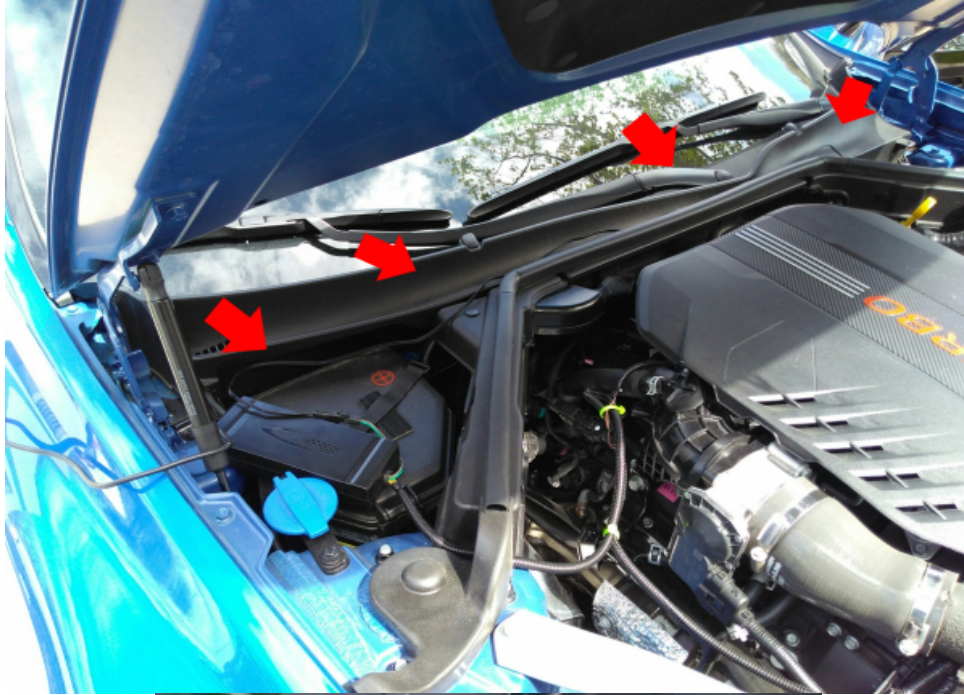

Latch goes over the notch on plug with green and brown wires

Notch on plug that is on the JB4 side with green and brown wire

The JB4 includes optional black fuel control wires giving the JB4 the ability to directly change the air/fuel ratio. The factory tuning runs in the 10:1 range and leaning that out to 11.5:1 has proven to be worth significant power at higher engine speed. Note these are preinstalled on the JB4 harness now so only need to be attached to the o2 sensor signal wire to enable using the included posi-taps or our optional fuel harness adapters.

No setting changes are needed to enable the fuel control wires.

For 2L applications only the longer wire is used and it goes to the primary o2 sensor signal WHITE wire. For those using the optional PNP Fuel Wire adapter, connect the posi-tap to the wire in position #2. To find position #2, just look at the small numbers on the adapter itself.



If you've purchased the optional JB4 mobile adapter open the enclosure and plug the adapter into the JB4 board directly as shown. When closing the enclosure ensure the control board is properly lined up and only tighten down screws once the case closes smoothly to avoid damaging the JB4 board. Note some older JB4 mobile adapters have a separate blue wire which will need to be attached to the JB4 harness via a posi-tap, refer to the video on the JB4 Mobile adapter page for additional directions.


## **JB4 Connect Kit (Pinned Power) Install Guide**

04-13-2020

### **1) Open the JB4 enclosure.**



### **2) Install the DB9 connector and ensure both screws are secure.**

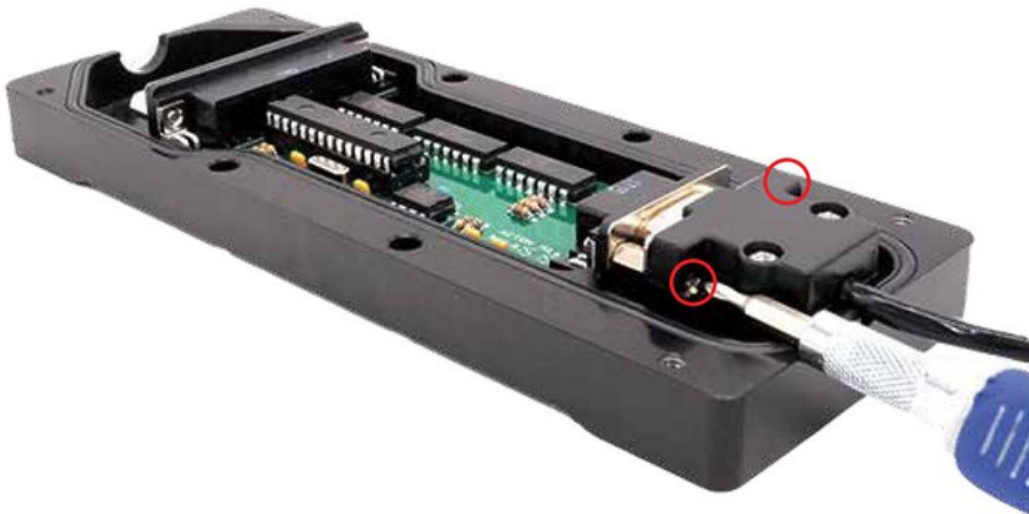

Reinstall the engine cover and installation is complete!

The JB4 comes preset to Map 1 which runs approximately 4psi over stock peak tapering to 2psi over stock at redline.

Maps can be changed using the JB4 Wireless Mobile Connect Kit or BMS Data Cable to adjust boost levels, record data logs, read/delete fault codes, and load free firmware updates.

Refer to the link below for the full map guide, software, firmware updates, how to videos, and tuning details.

<http://www.jb4tech.com/forums/showthread.php?t=52020>