

BMS Blow Off Valve Adapter for 2020+ CT4/CT5 2.0T Install Guide


Last updated 5/19/2023

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




Locate and remove the OEM diverter valve by removing the three T30 Torx screws and undoing the connector. Keep the screws aside in case you need to revert to stock.

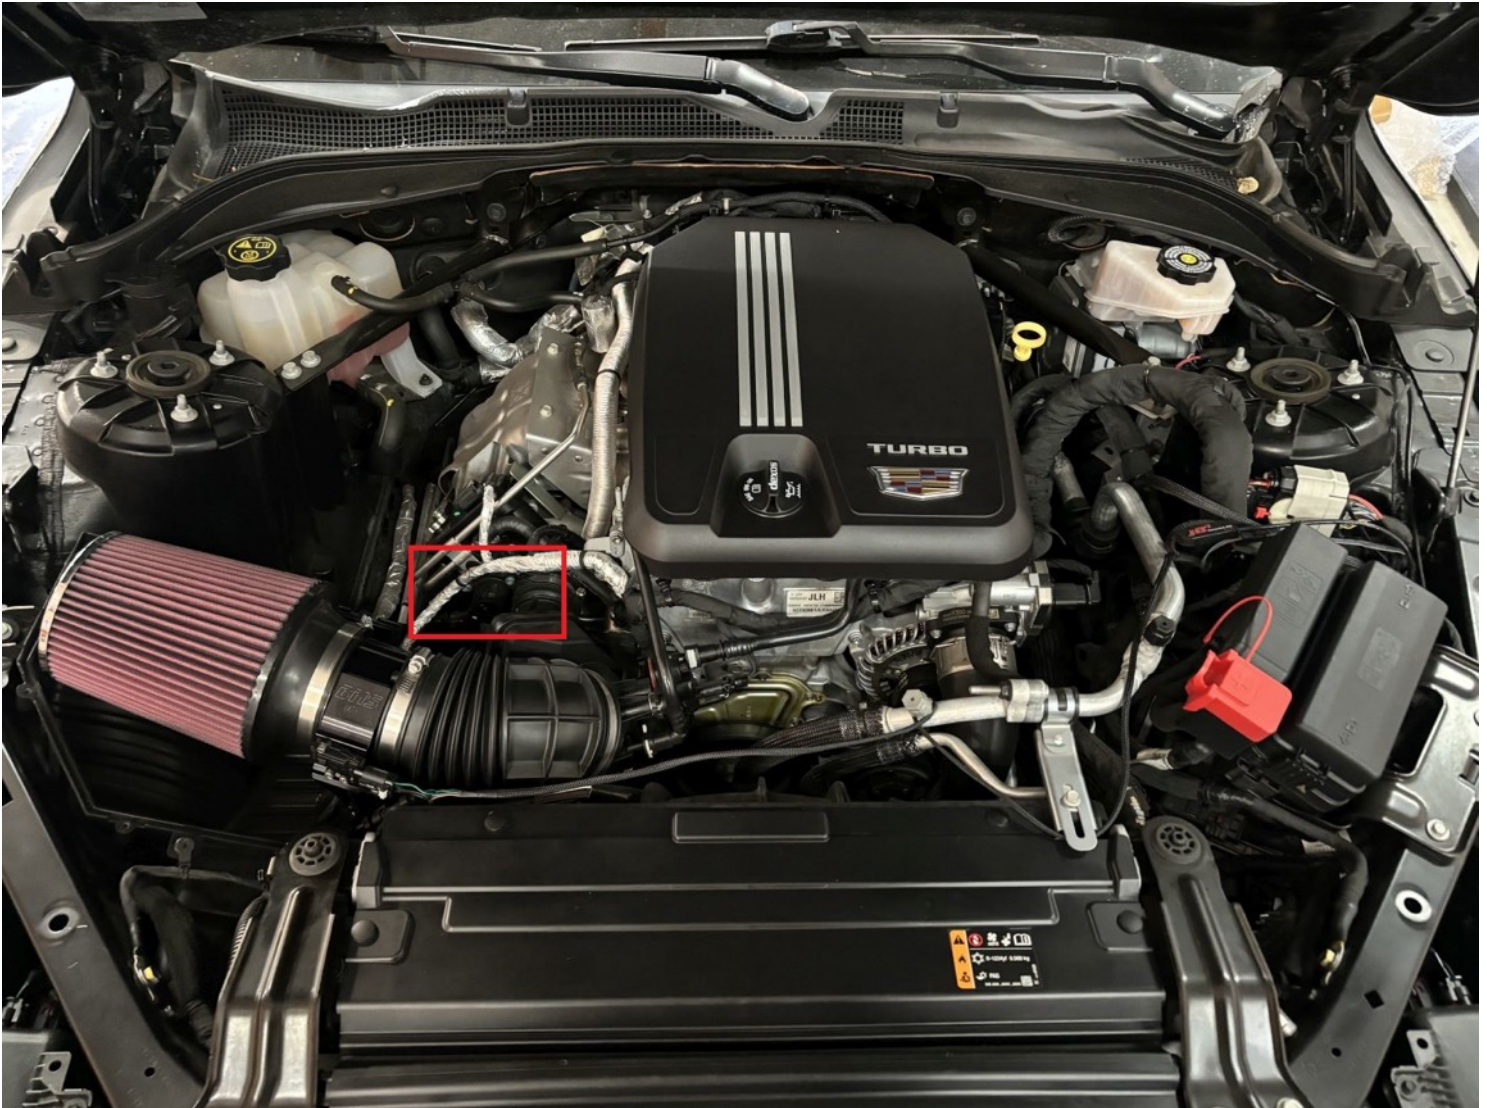

[BMS Billet Intake for 2020+ Cadillac CT4 & CT5 2.0L Turbo Shown](#)



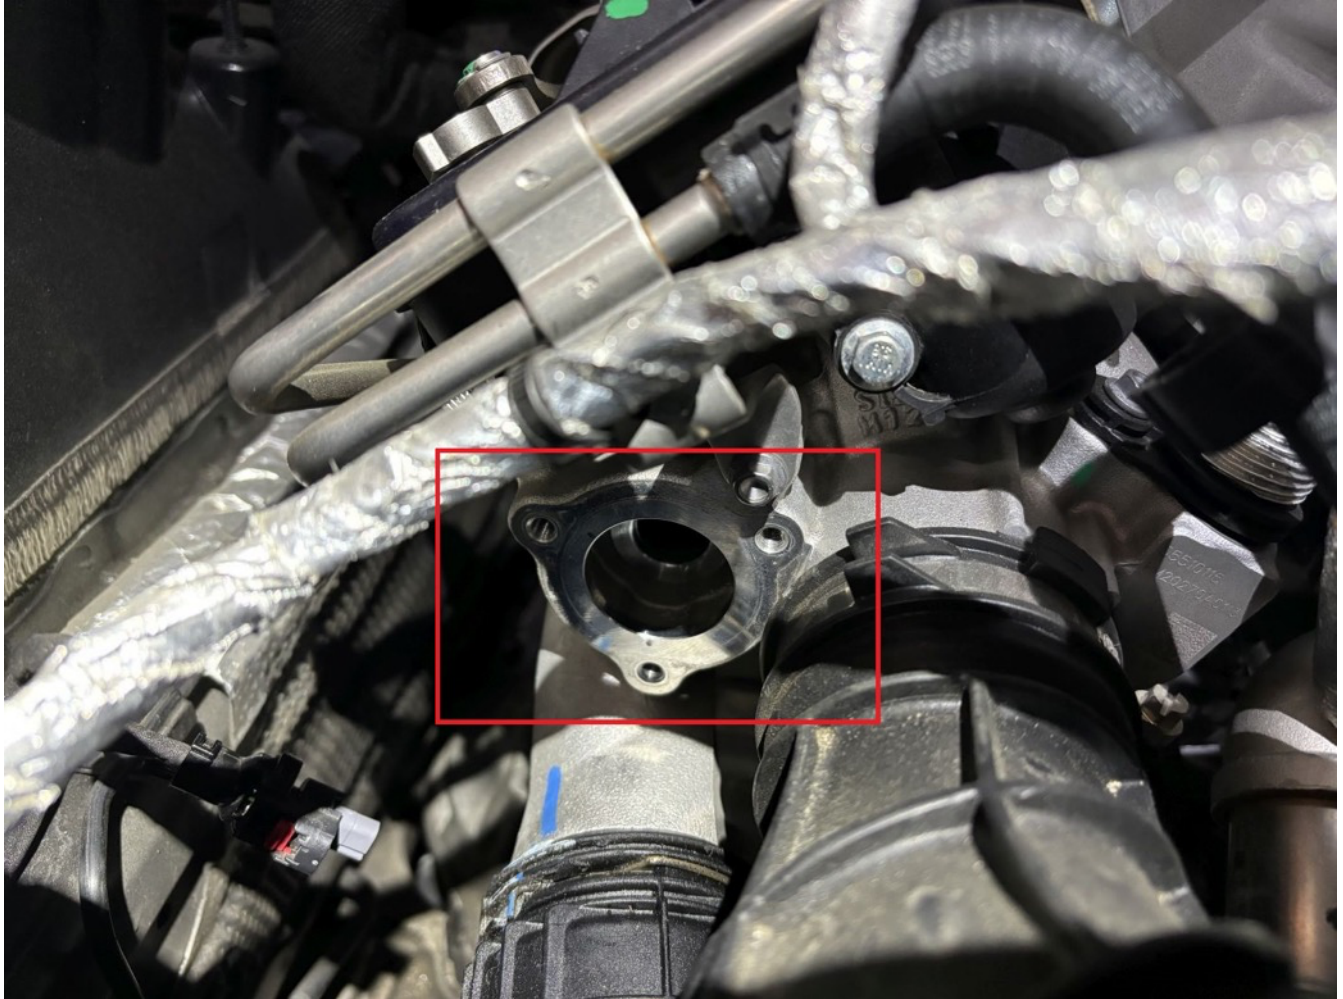

Install the BMS BOV spacer and sandwich it between the OEM diverter valve and the turbo.



Line up the 3 screw holes correctly as it can only go one way. Install using the provided longer bolts with a 5mm allen key. Attach the connector back to the diverter valve to complete the install.

