
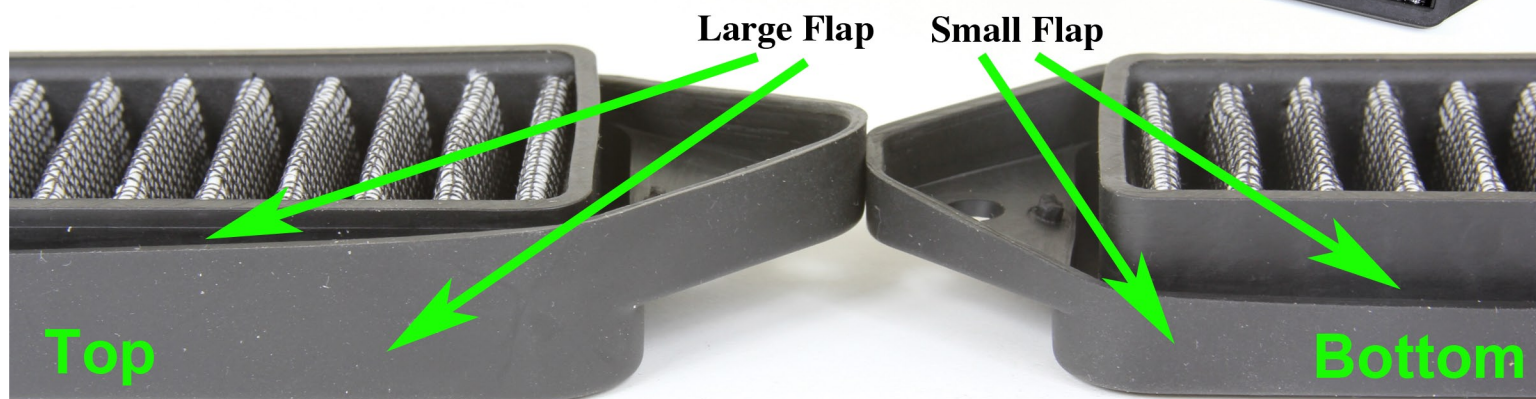


BMS Cowl Filter Install Instructions:


Tools needed: 8mm socket or 8mm wrench

There is probably one in the tool kit in the trunk.

1. Please note before starting the install. The filters are both different. One is the drivers side and one is the passenger side. To tell these apart the larger flap should be on top. See photo below. When installing the larger flap should be on top closer to the windshield and the smaller flap should be on the bottom closer to the engine.

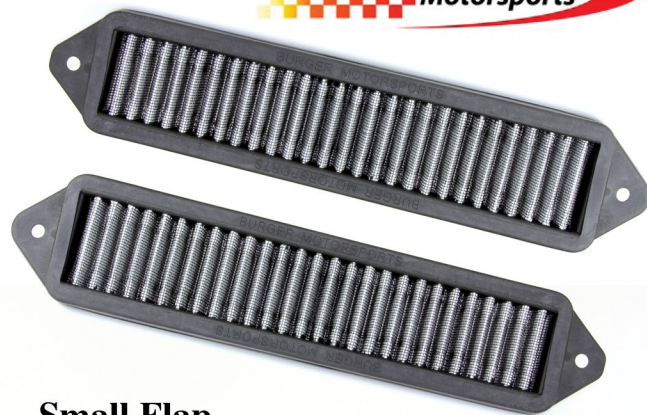


2. First thing is to remove the DME cover and the brake fluid side cover. There are (2) **small clips** in the middle of each side of the covers. Pry them outward with your fingers and lift the cover up. It will be caught on a **rubber tab** but just pull the lid towards the front of the car. They are #1 below.

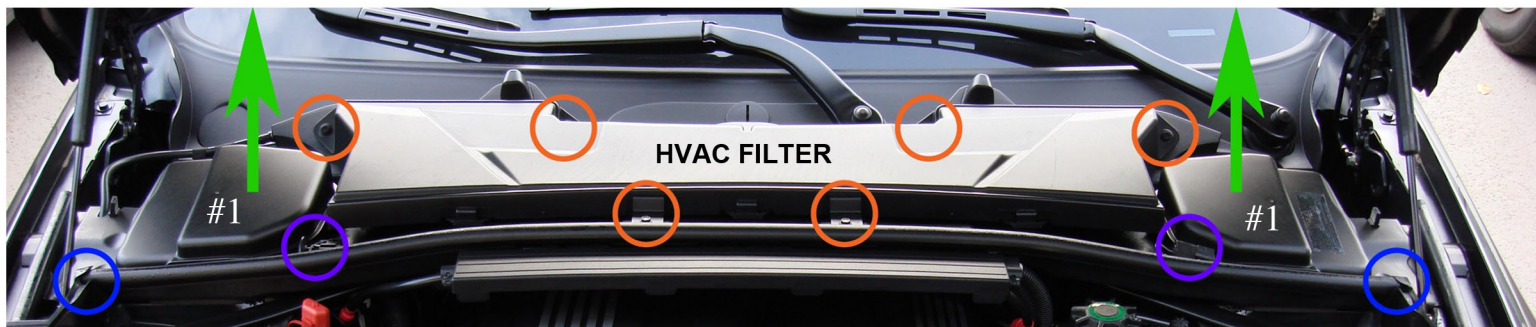

3. Next remove the large **HVAC filter** in the above photo. The (6) 8mm screws locations are circled in orange the above photo.



4. Now remove the **sensors** circled in purple in the above photo. Some vehicles have 1, some have 2 **sensors**. Turn clockwise to loosen. Pull up on the tabs holding the wires going to the sensors. Place or zip tie them out of the way.

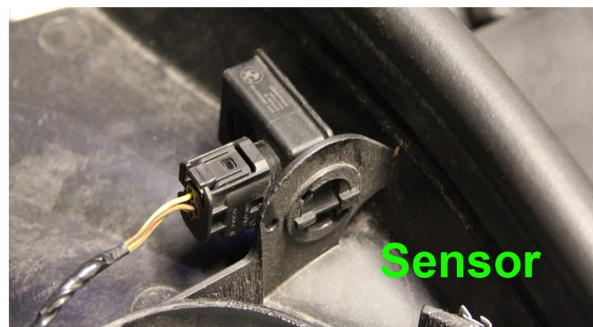

5. Remove the (2) 8mm screws circled in blue above. When both screws are removed lift up on the cowl and pull towards the front of the car.

BMS Cowl Filter Install Instructions:



6. Place the filters in the correct holes with the larger flap up as mentioned in step 1. You can wiggle and bend the filter a little to get it to fit in the hole. Tighten the larger thread 8mm bolts but do not crush the rubber. Below is what the installed filter should look like.



7. Place the left over bolts in the holes they came out of in the cowl for safe keeping.

Enjoy the benefits of removing your cowl!