


Use the included super lube to lubricate the fittings shown below.

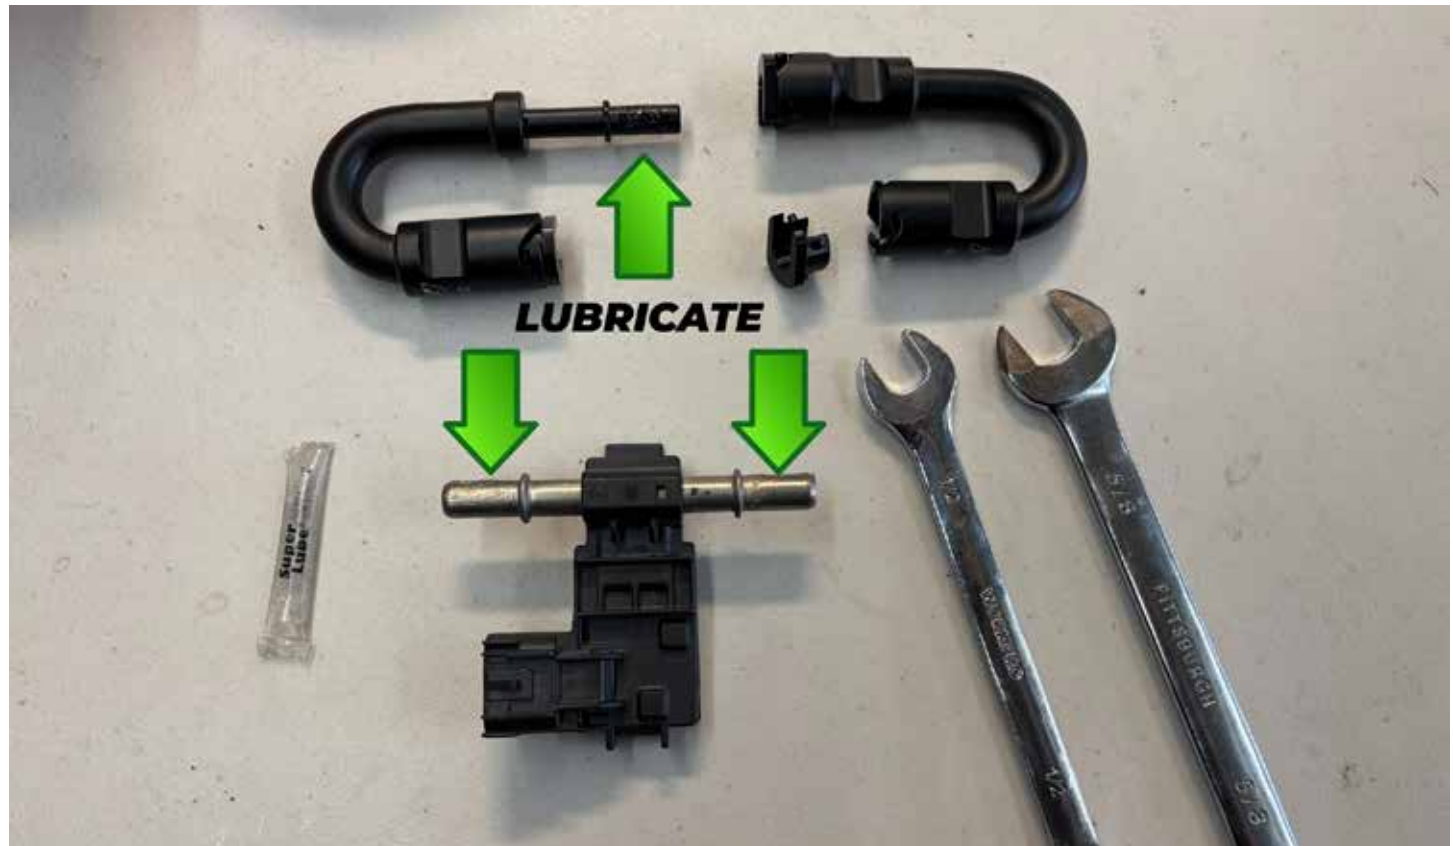

Connect and secure the included 180° fitting to the ethanol sensor as shown below. Make sure they securely lock in place.



Remove the 3rd factory 10 amp switched power fuse. Plug the fuse wire into the fuse box.



Attach the black ground wire fork to the trucks ground shown below.



Run the blue wire to the JB4 and plug wire into position #4 on the JB4 25 pin harness. Be sure to put the blue wire through the inside of the rubber grommet on the JB4 case.



In the JB4 app select WMI Ethanol Setup option 0 to activate the ethanol content sensor.



Connect the CANflex LED module and either run it inside the passenger compartment or leave it in the engine bay with the included silicone cover for protection.



Under the truck on the driver's side locate the braided fuel line and pop the clip off.



Press the included fuel line unlock tool into the metal fuel line to release it.



Lube the black fitting with the included superlube.



Connect the sensor to the fuel lines as shown. Plug in the orange cable.



Make sure the wiring is safely secured away from the exhaust system and other sources of extreme heat.

