

CANFlex Bluetooth Flex Fuel Kit for 2025+ RAM 1500 Bluetooth 3.0L I6 Hurricane Install Guide

Last updated 11/11/2025

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




JB PRO App



CANFLEX App

Use the included super lube to lubricate the fittings shown below.

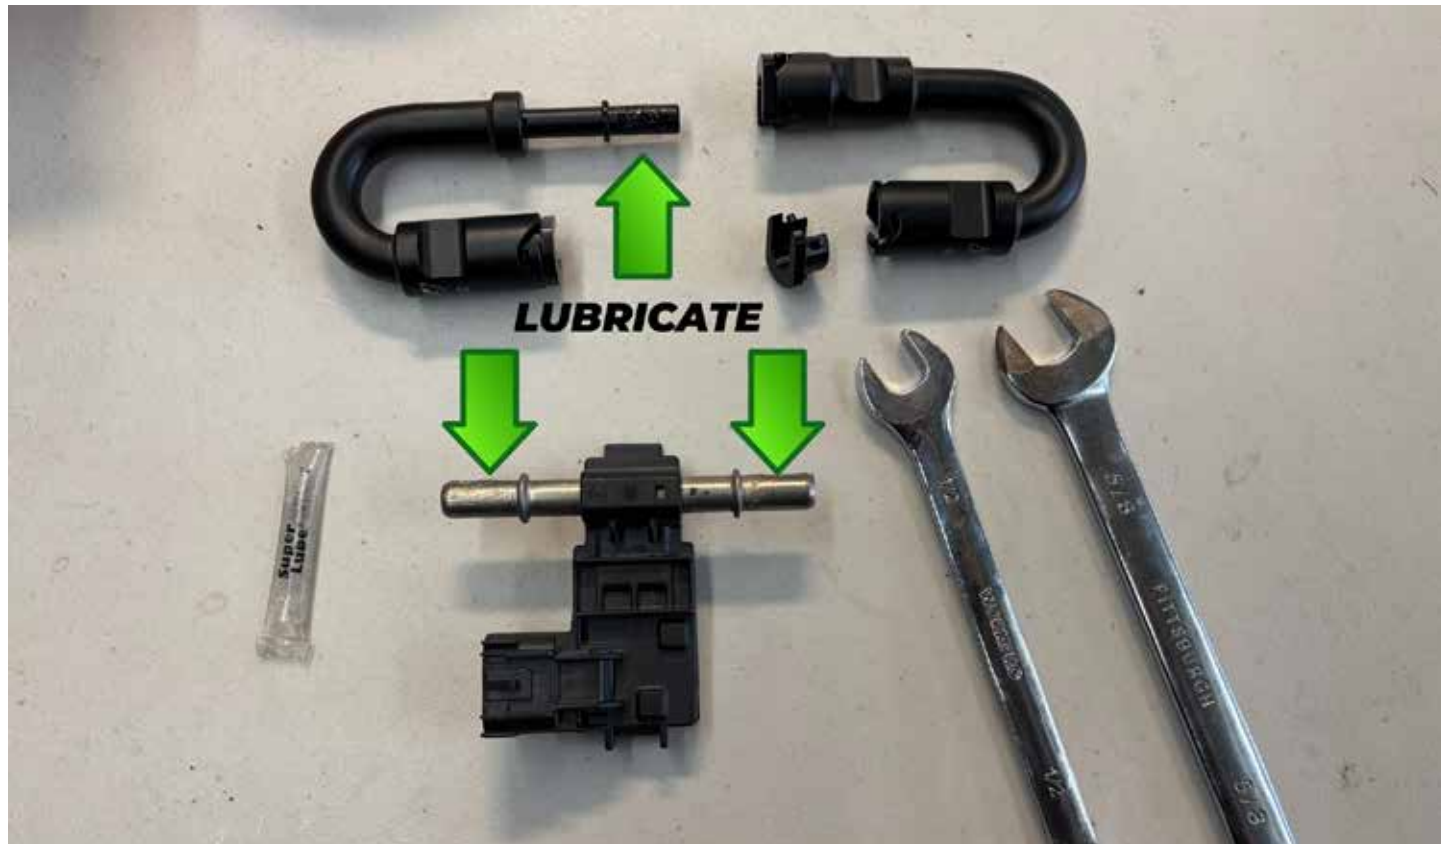

Connect and secure the included 180° fitting to the ethanol sensor as shown below. Make sure they securely lock in place.



Remove the 3rd factory 10 amp switched power fuse. Plug the fuse wire into the fuse box.



Attach the black ground wire fork to the trucks ground shown below.



Run the blue wire to the JB4 and plug wire into position #4 on the JB4 25 pin harness. Be sure to put the blue wire through the inside of the rubber grommet on the JB4 case.



In the JB4 app select WMI Ethanol Setup option 0 to activate the ethanol content sensor.



Connect the CANflex LED module and either run it inside the passenger compartment or leave it in the engine bay with the included silicone cover for protection.



Under the truck on the driver's side locate the braided fuel line and pop the clip off.



Press the included fuel line unlock tool into the metal fuel line to release it.



Lube the black fitting with the included superlube.



Connect the sensor to the fuel lines as shown. Plug in the orange cable.



Make sure the wiring is safely secured away from the exhaust system and other sources of extreme heat.

