

## CANFlex Flex Fuel Kit for 2024+ Toyota Tacoma/4Runner 2.4L Turbo Install Guide

Last updated 11/11/2025

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




**JB4 PRO App**




**CANFLEX App**

Use the included super lube to lubricate the fittings shown below.

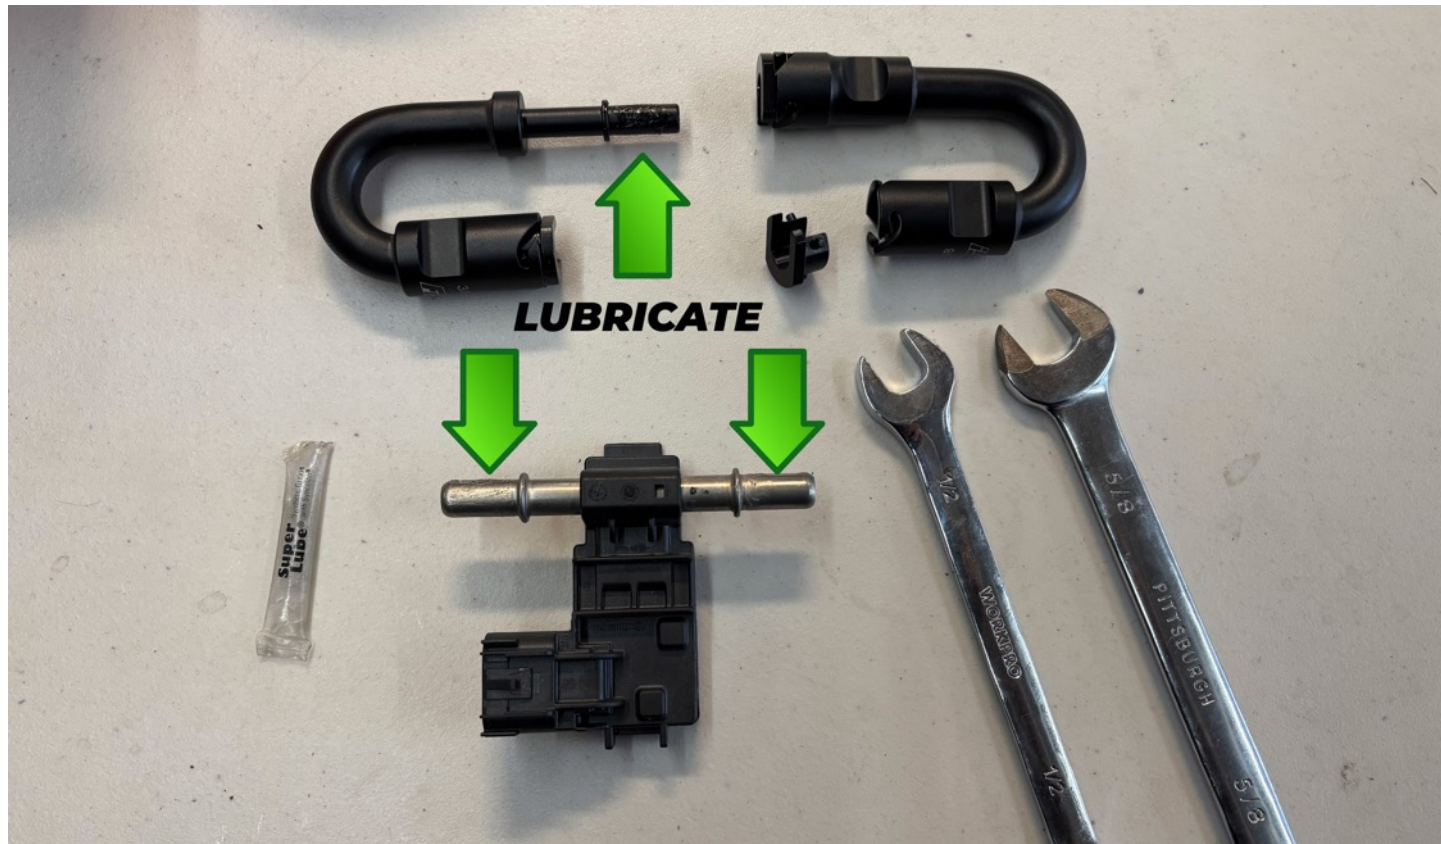


Connect and secure the included 180° fitting to the ethanol sensor as shown below. Make sure they securely lock in place.

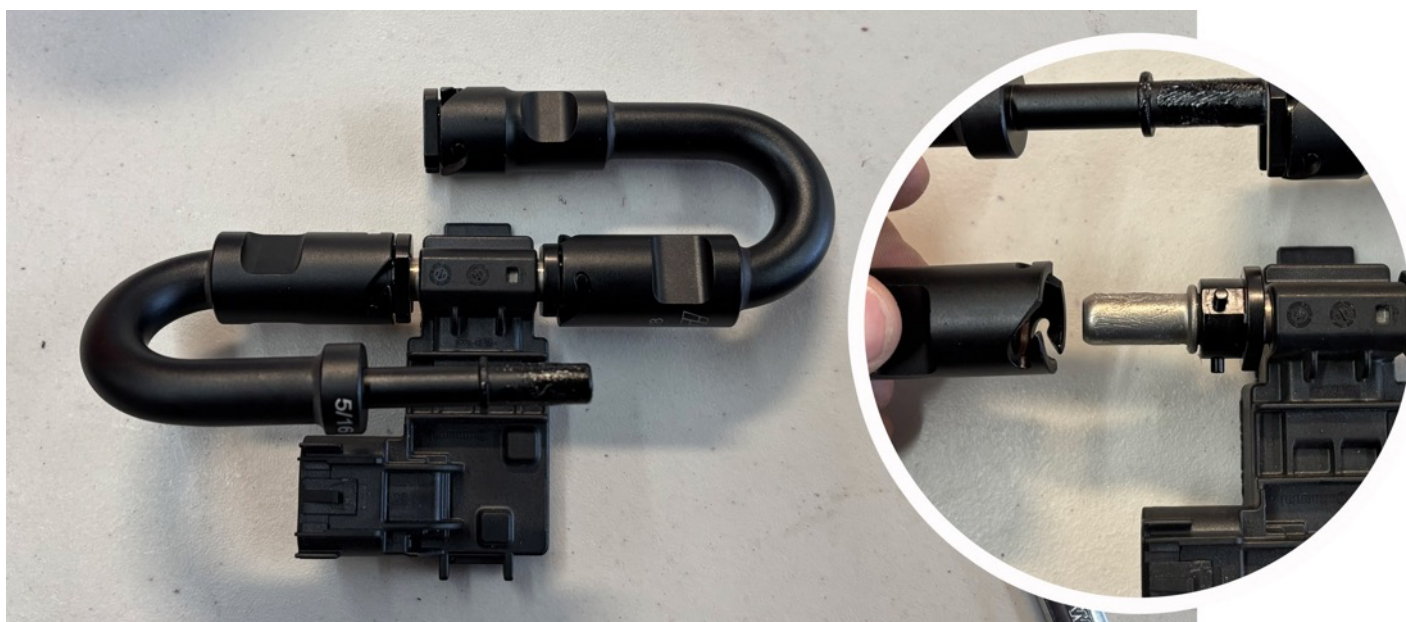




Place the included fuse-tap 3<sup>rd</sup> down from the top factory 10 amp switched power fuse.

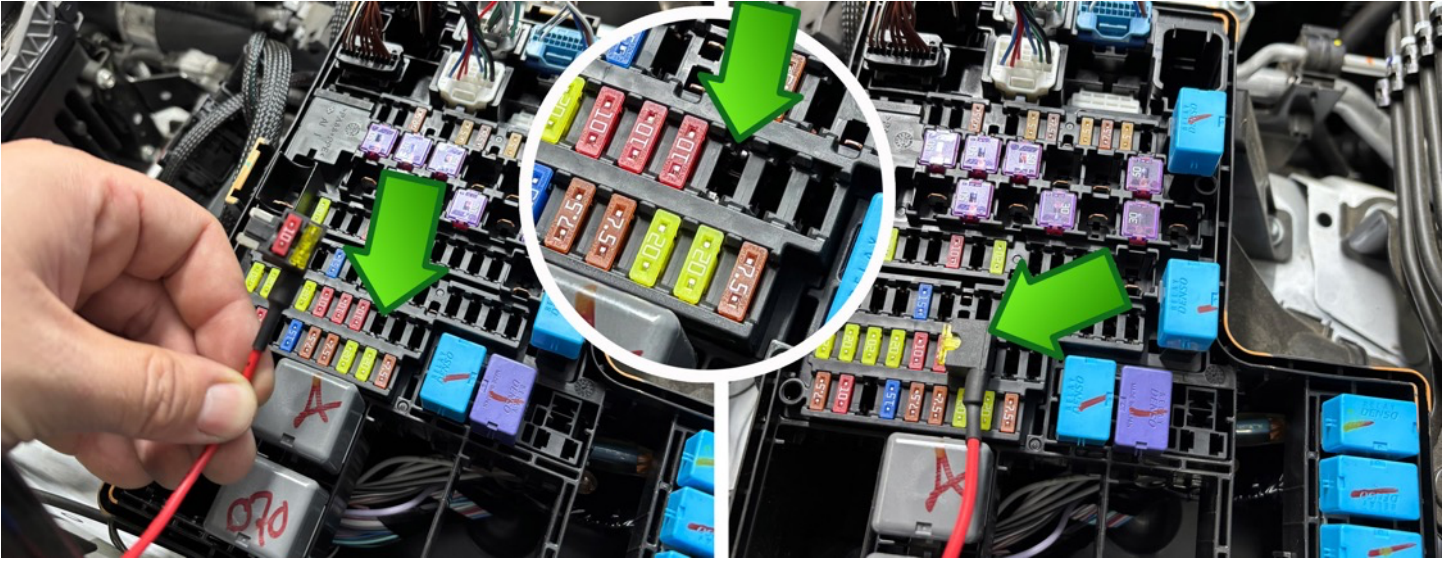


Run the blue wire to the JB4 and plug wire into position #4 on the JB4 25 pin harness. The black ground wire fork to the trucks ground shown below.

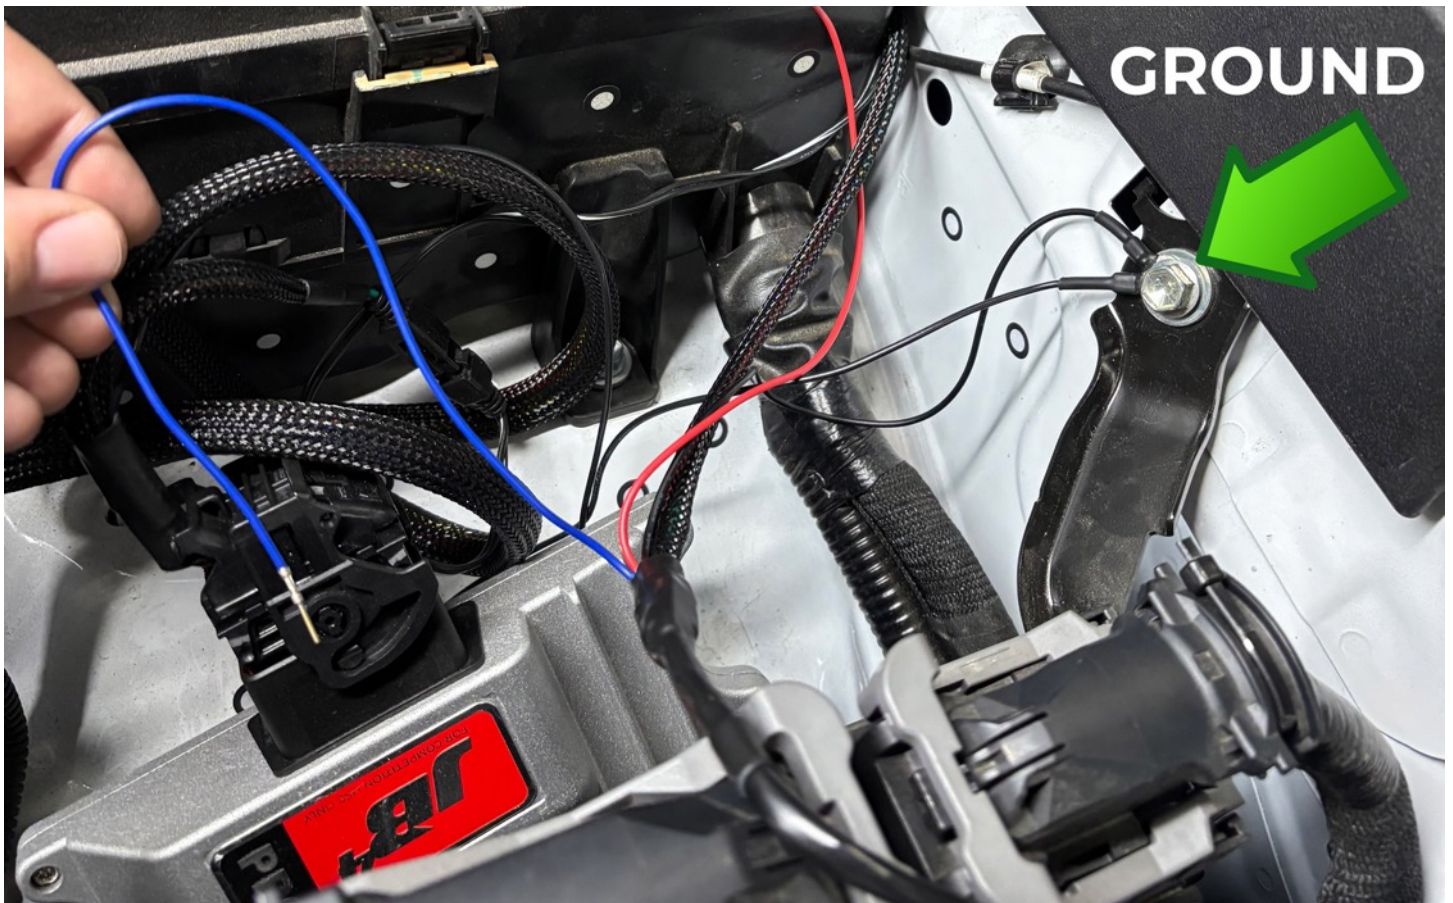



Locate the fuel line and pop open the orange release tab and slowly pull the fuel line off. Line may be under pressure. Place a rag under it to catch any fuel.

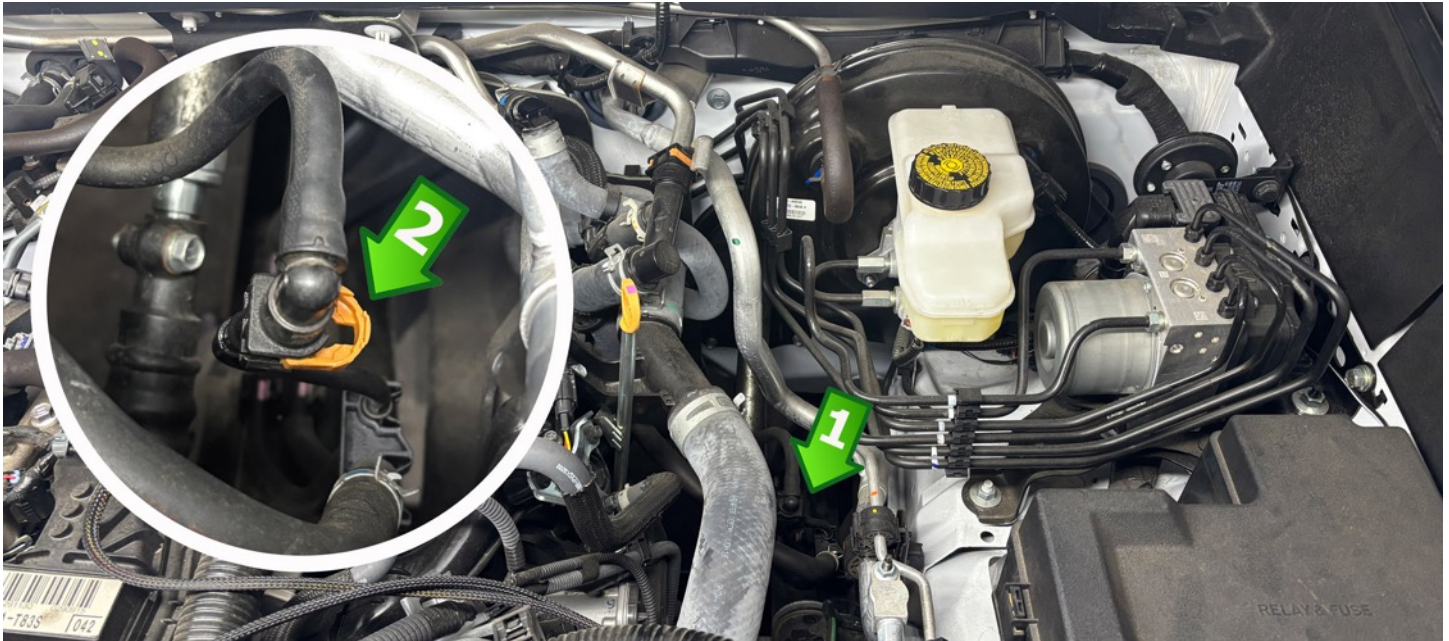

Attach the ethanol content sensor and the 180° connectors as shown. Make sure the twist-lock connections are fully secure.





Connect the ethanol content sensor and the 180° connectors as shown to the hard fuel line. Make sure the twist-lock connections are fully secure.





Connect the CANflex LED module and either run it inside the passenger compartment or leave it in the engine bay with the included silicone cover for protection. In the JB4 app select WMI Ethanol Setup option 0 to activate the ethanol content sensor.





The LED readout can be mounted in the engine compartment or routed into the passenger compartment. If left in the engine compartment, please use the included silicone protective case.

