


Kia Hyundai Genesis Downshift Blocker

Last Updated: 7/15/2022

Use subject to terms and conditions posted at
<http://www.burgertuning.com/terms.html>

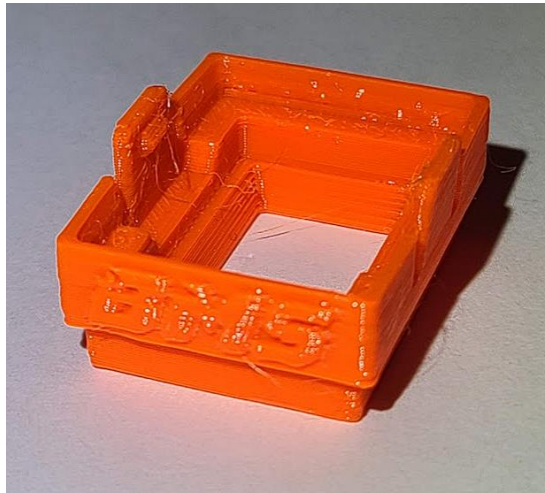

Installation photos are of a pedal off of the vehicle. This is not necessary for installation. Locate the pedal and find the white kickdown detent button. The kickdown blocker will snap over this location on the pedal.



Slide the kickdown blocker into the space at the base of the pedal, with the tabs facing toward the pedal. If you did not remove the pedal from the vehicle, you will be able to reach around both sides of the pedal to position the blocker inside.



Using your fingers, move the blocker up and over the detent button.



When the unit is properly aligned, the factory detent button will be in the center of the window and the unit will be aligned to the pedal surface.

Once it is close to the correct position, tap the pedal down until the unit snaps into its final position.



Installation is complete.