

## **BMS Billet Intake for 2020+ Cadillac CT4 & CT5 2.0L Install Guide**

Last updated 5/19/2023


Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




Make sure the car is off and the key is far enough away from the car that it doesn't turn on. Next disconnect the MAF sensor plug by sliding the red tab to the right and pinching the black clip just behind it and pull the plug off.

Then remove the two torx screws holding the MAF sensor on.

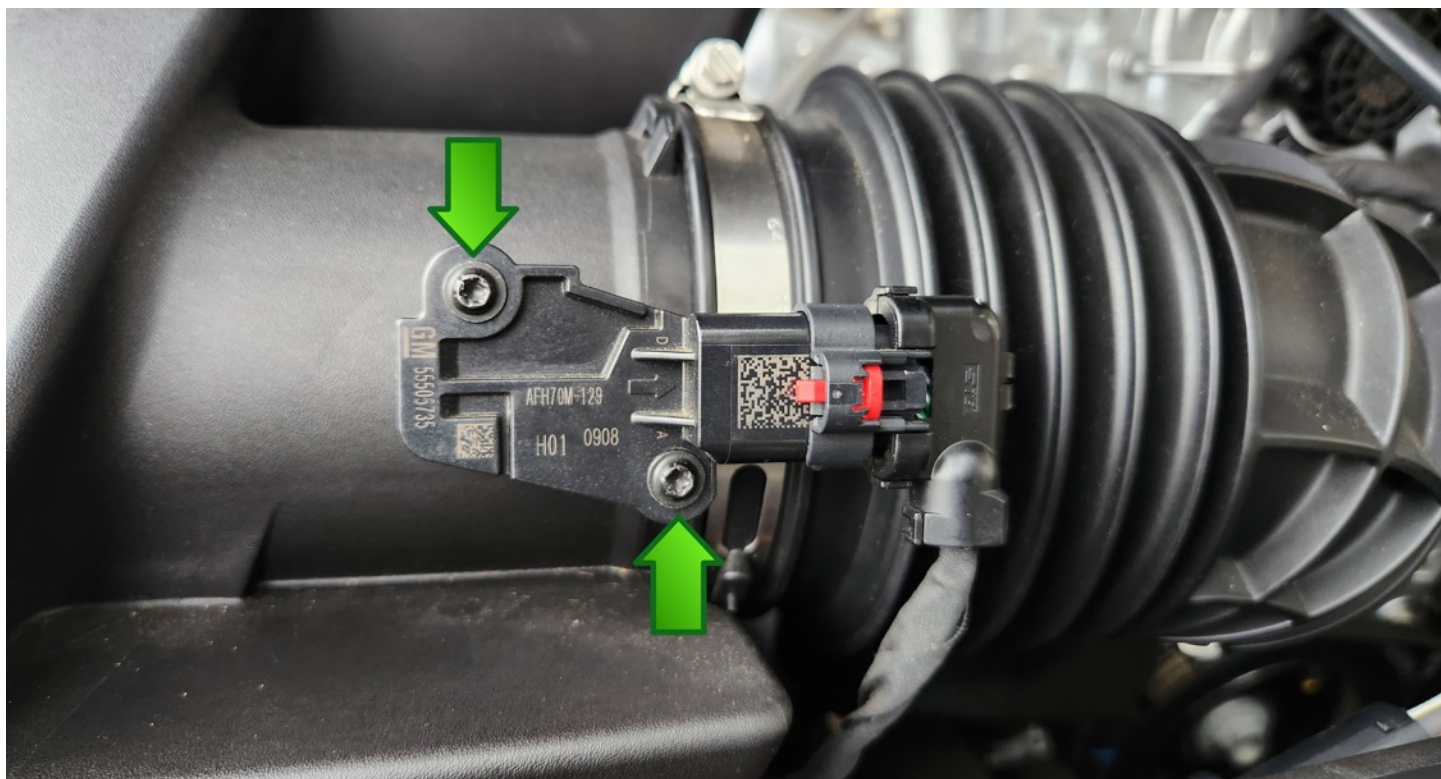


Loosen the 5 Phillip's head screws on the airbox. The red arrow screw is removed from the air box and reused for the BMS intake bracket. Loosen the hose clamp.

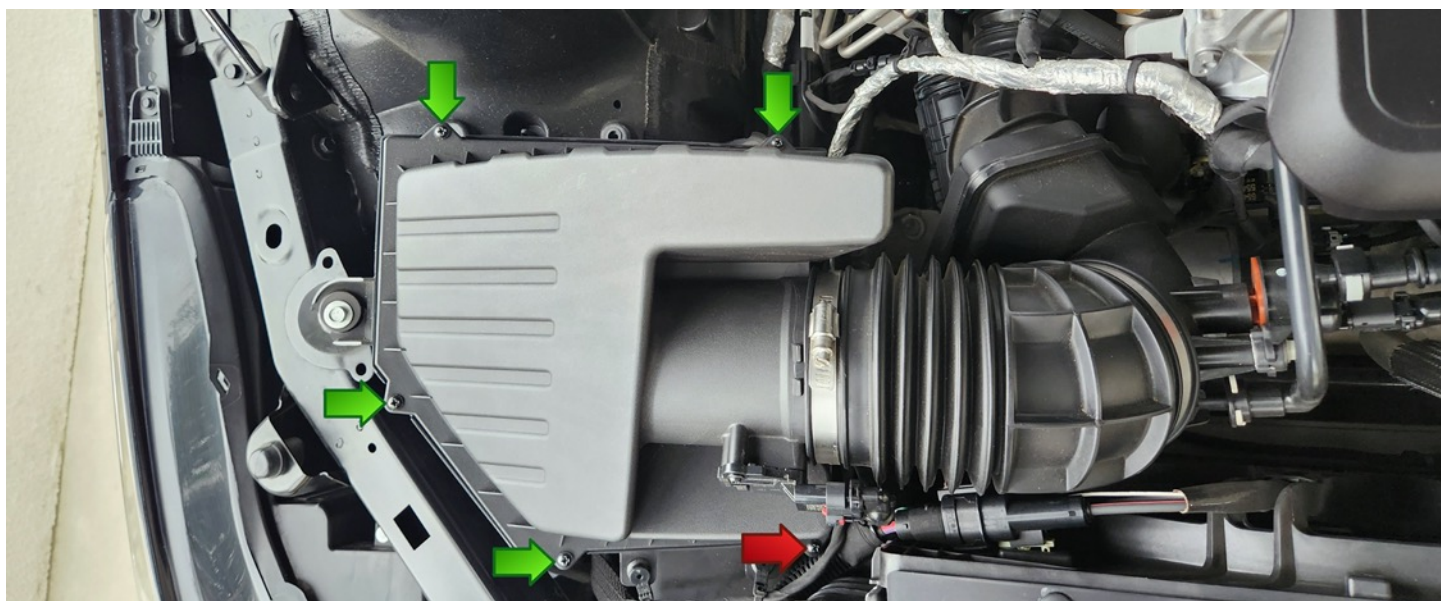



Remove the airbox lid and restrictive factory filter. Leave the airbox bottom in place.

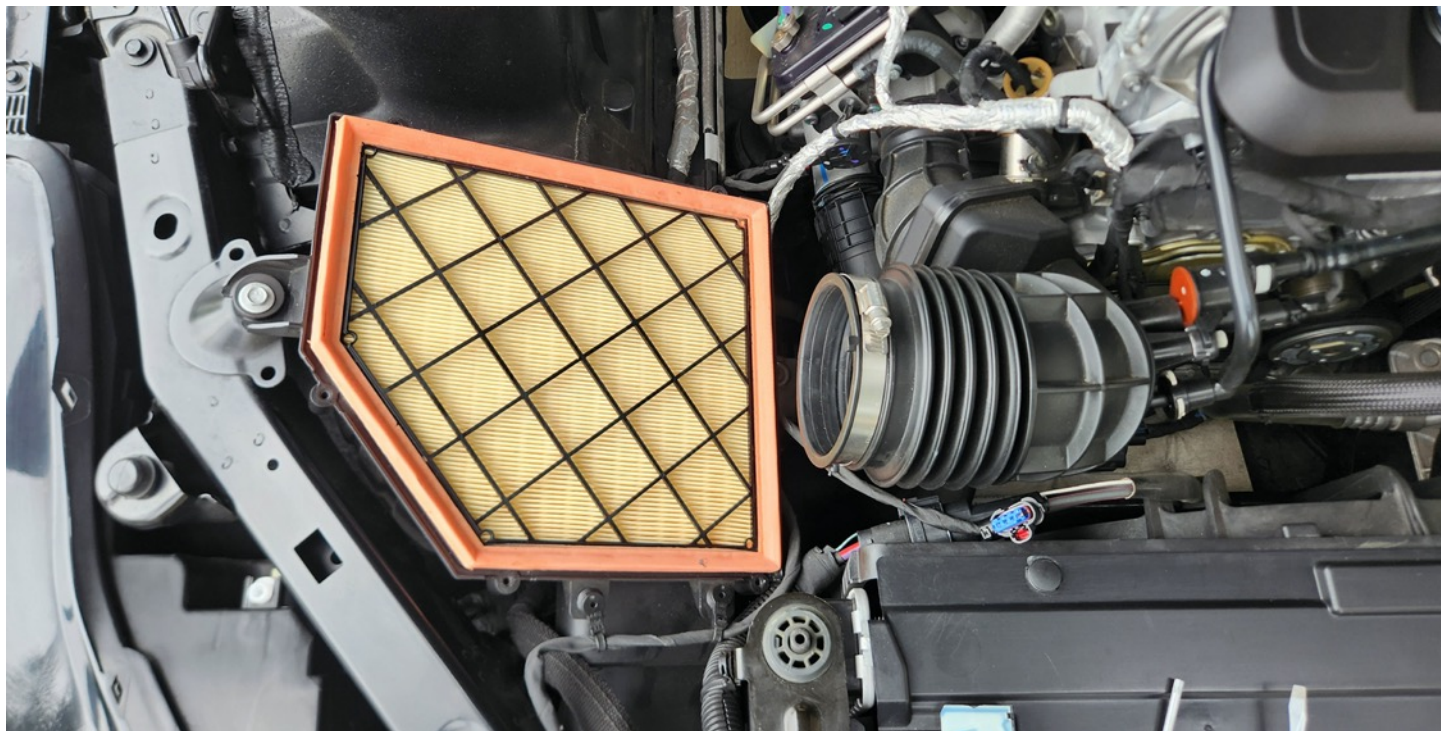

Assemble the BMS intake and filter. Be sure to tighten all of the bracket bolts. They can be used for slight adjustment if needed. Install the MAF sensor with the supplied allen bolts. Tighten the filter clamp but don't over-tighten.





Next use the black factory Phillip's head screw you removed from the air box lid to bolt the billet bracket to the airbox. The "J" shaped guide on the bottom goes on the inside of the airbox bottom.

Tighten the hose clamp and plug in the MAF sensor plug and slide the red tab to the left.

