

Oil Catch Can for 2021+ Ford Bronco Install Guide (PCV Side)


Last updated 3/11/2024

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




Remove the plastic wire loom holders by pulling them straight off the threaded stud.

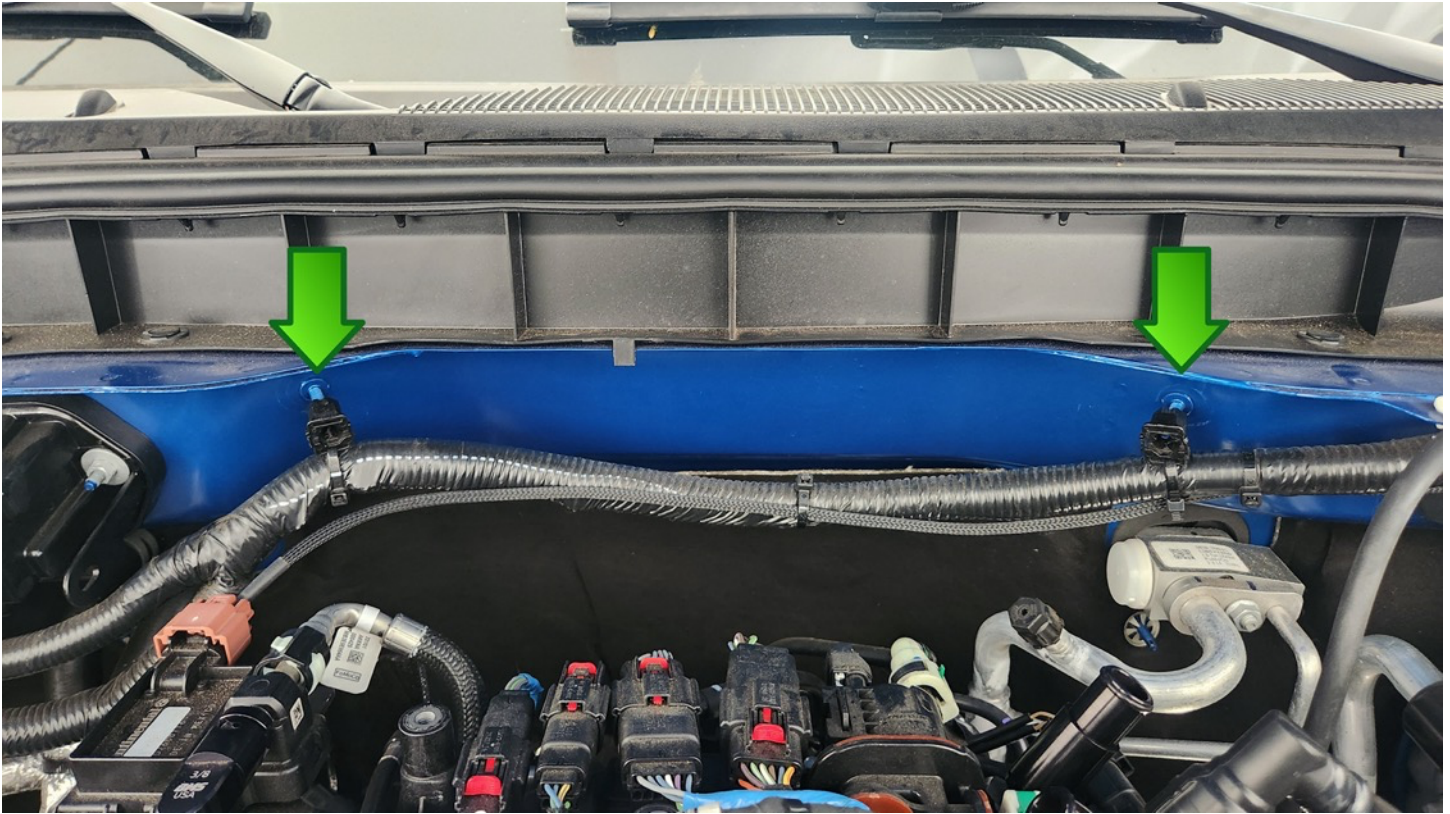


Next place the supplied custom bracket on them and secure it with the supplied 10mm flanged nuts. Then place the wire loom back in place.



Now assemble the catch can and hoses. The 10.75" length hose goes to the OUT fitting on the catch can. The 13" hose goes to the IN fitting on the catch can. Then attach the two 90° billet fittings as shown.

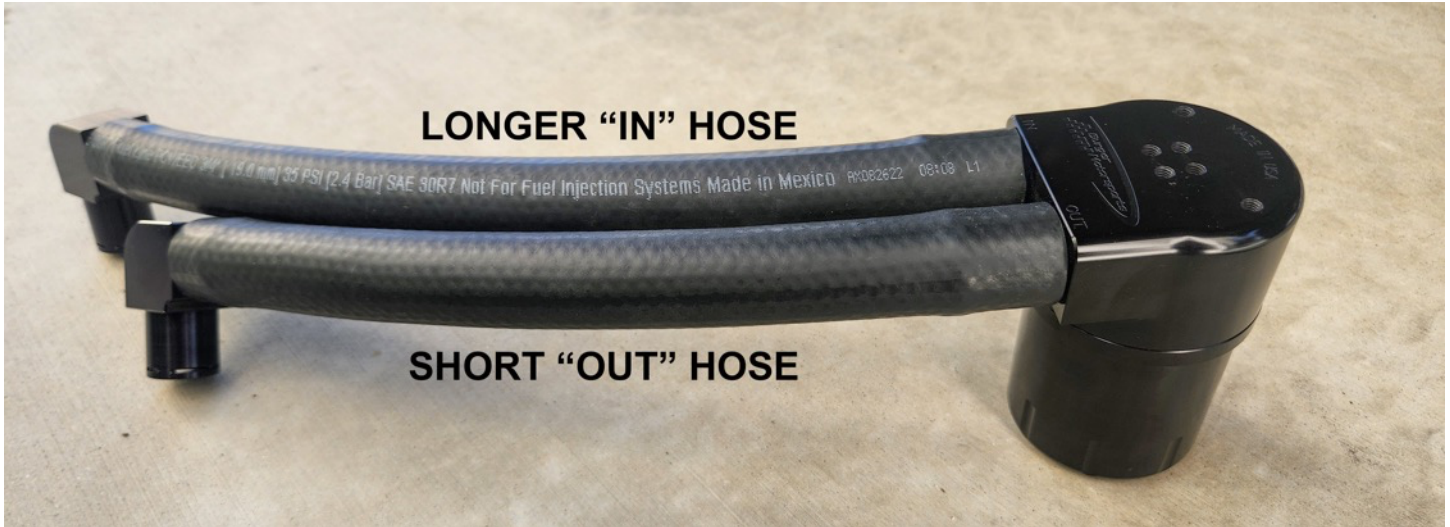

Now carefully remove the OE PCV hose by carefully pushing in on the tabs shown below and pulling it straight off. Store in a safe place.

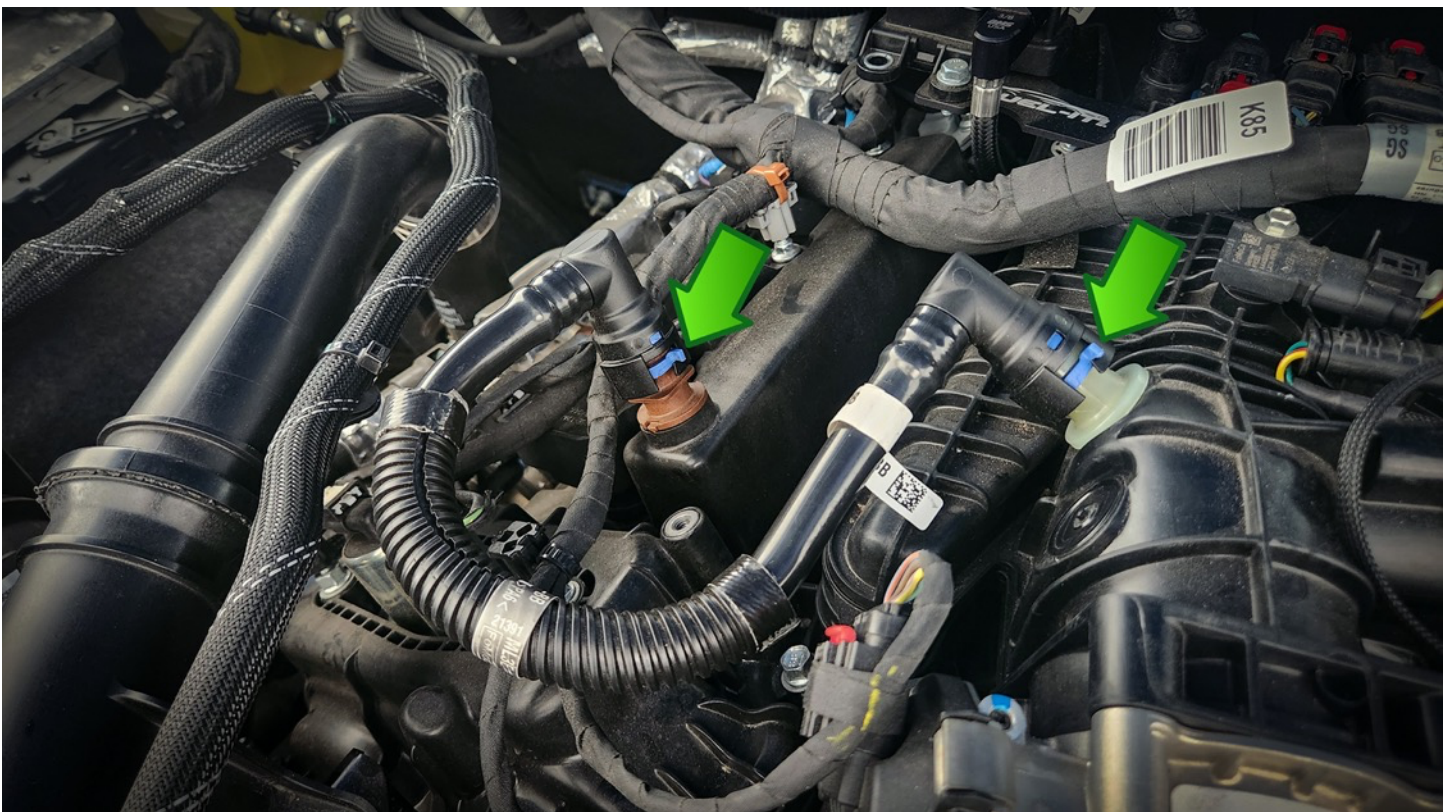

Exposed PCV fittings.



Now attach the catch can to the bracket with the two supplied stainless steel 4mm Allen screws. Now attach the 90° billet fittings to the PCV fittings on the car. Be sure to push them all the way down.



Attach the circlips as shown. Make sure they go all the way in. Tug on each fitting to ensure its secure.



Install complete. Simply unscrew the base every 3-6 months to empty or use the 1/8th NPT drain plug.