

## BMS Oil Catch Can, PCV Side for 2022+ Subaru WRX Install Guide


Last updated 4/2/2024

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>


THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.





Loosen the intercooler by removing these bolts.

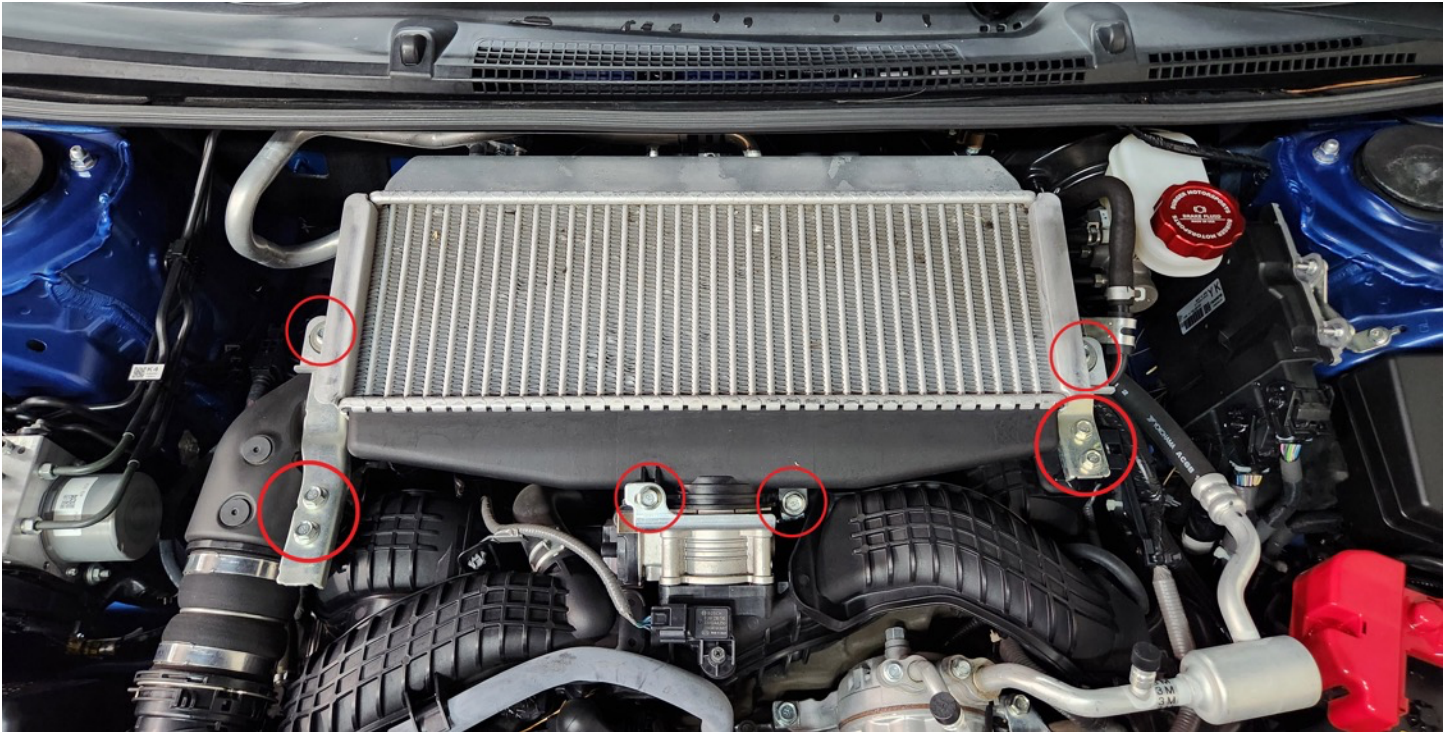


Unclip the charge pipe by pulling this clip up and carefully lifting up on the intercooler and set it aside to expose the PCV hose.

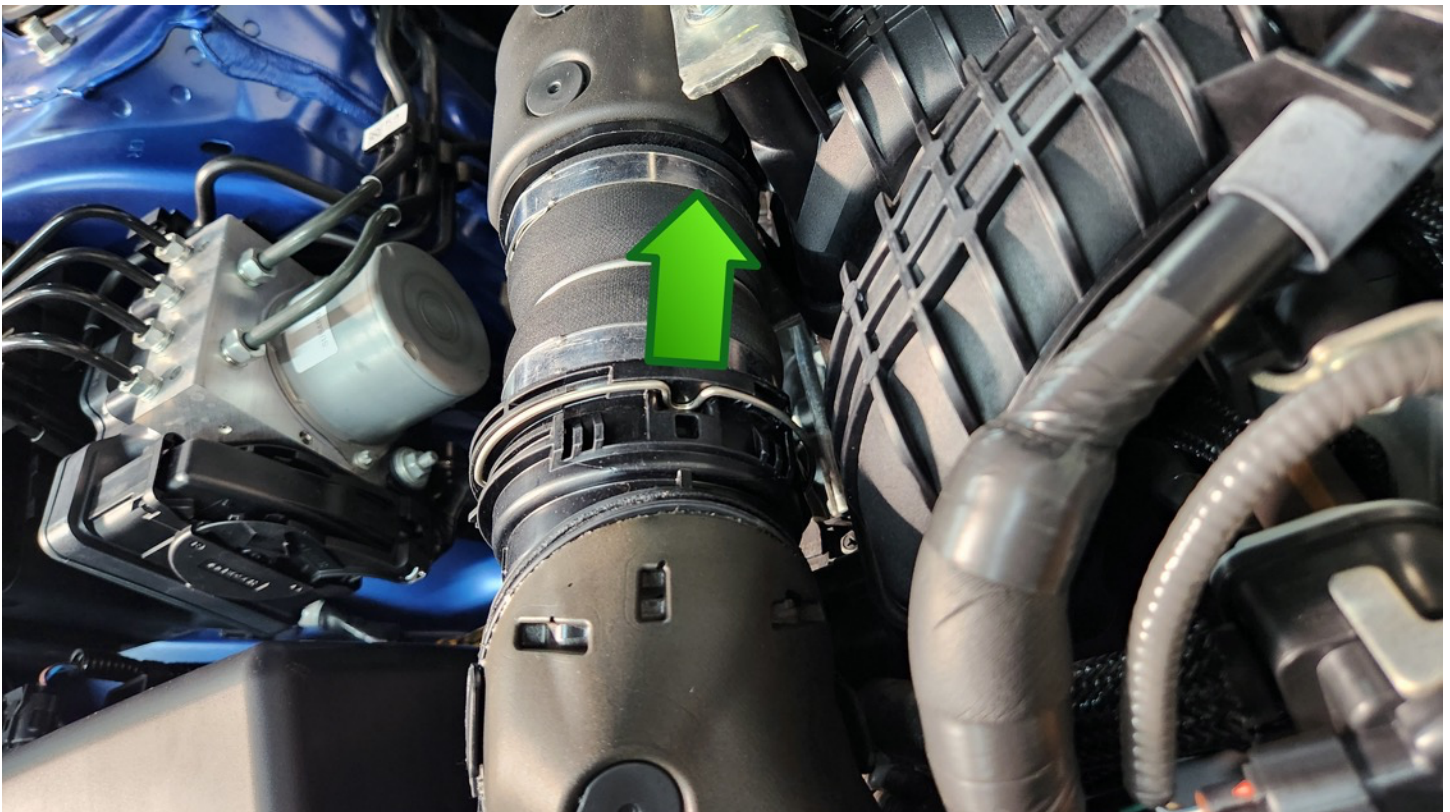

Remove the factory PCV hose by squeezing the factory clamps with pliers. These will be reused to attach the custom BMS silicone hoses to the PCV system.

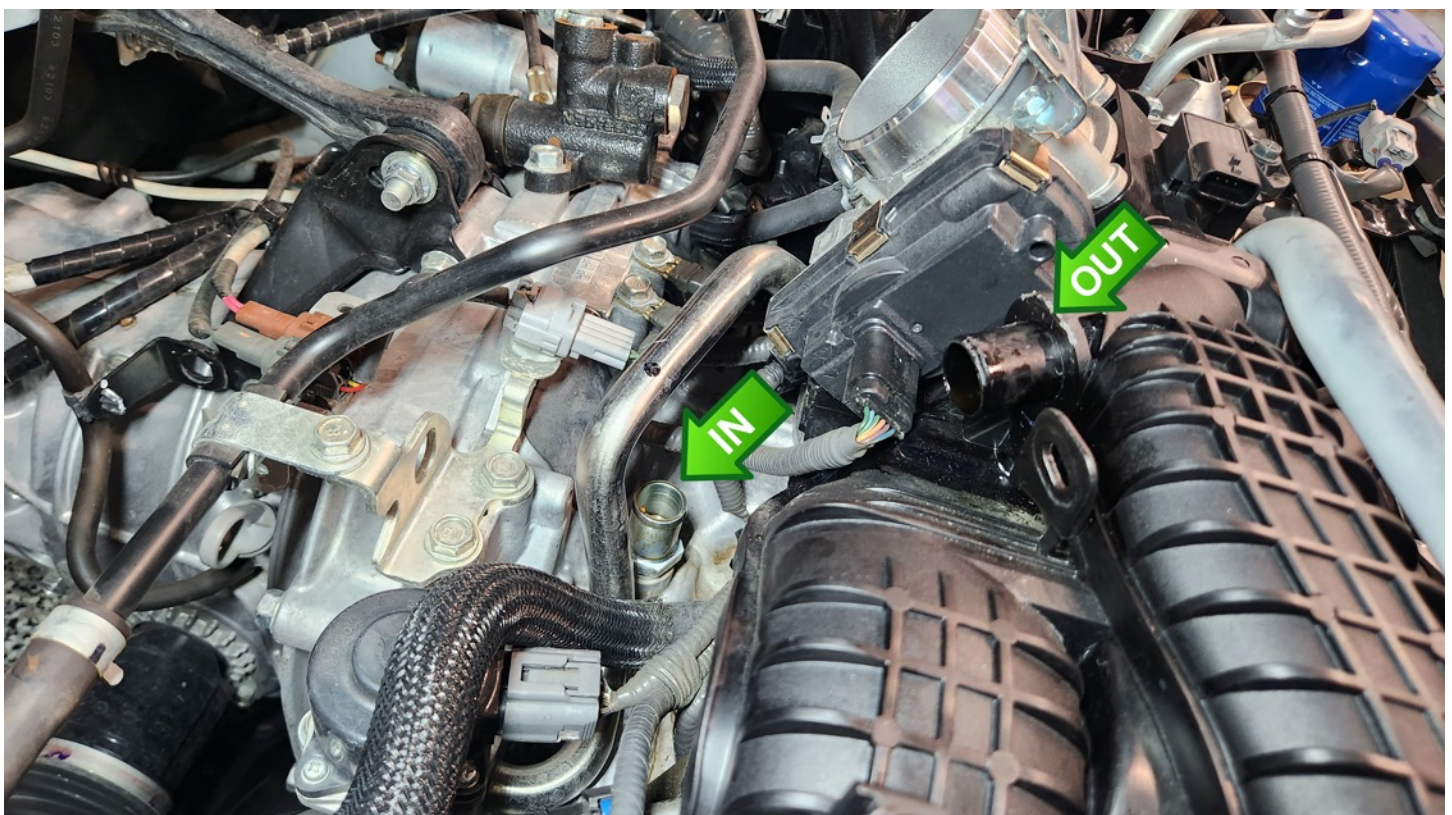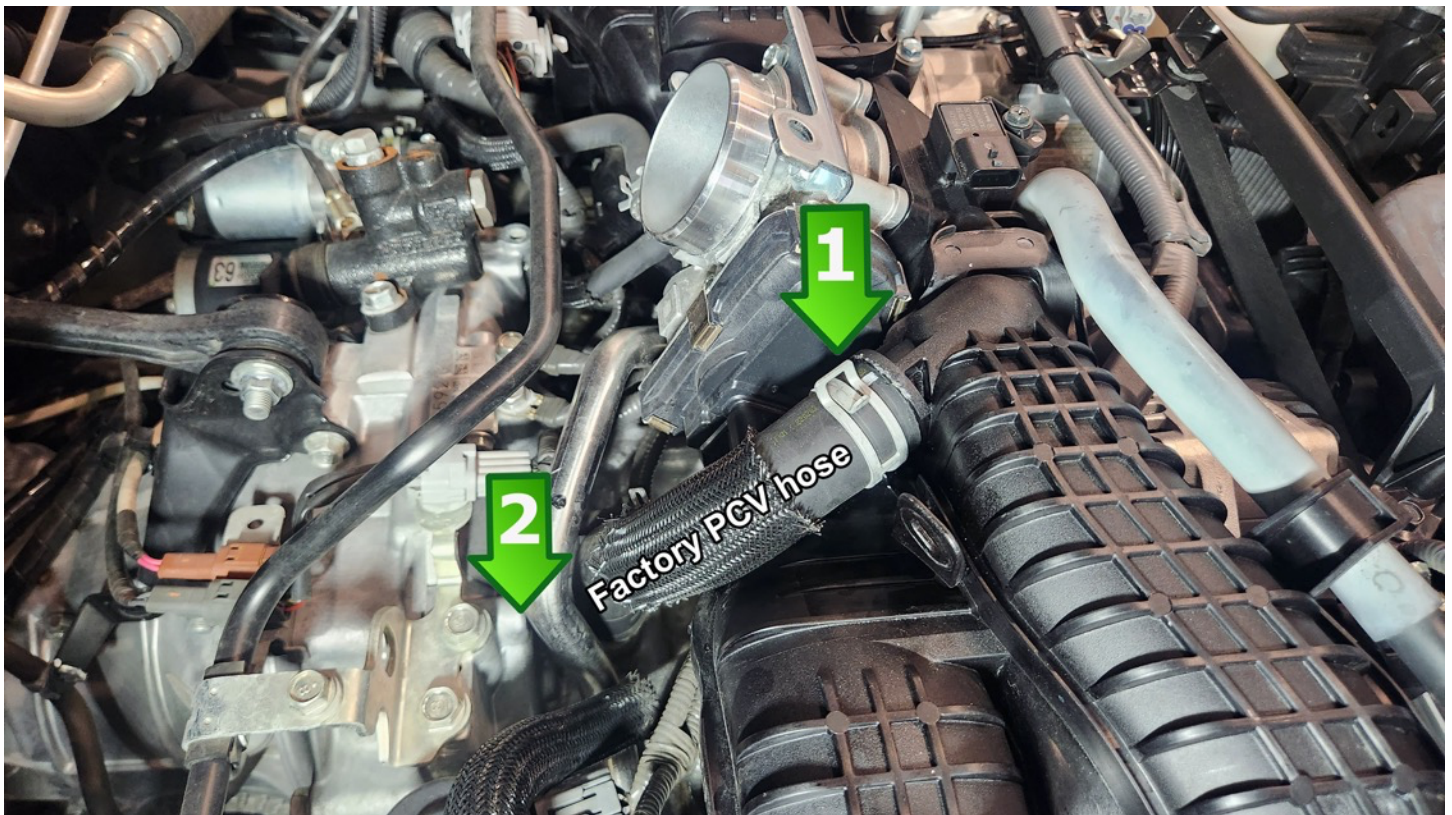

Remove the factory nuts and put the lower half of the BMS bracket on with the included nuts.

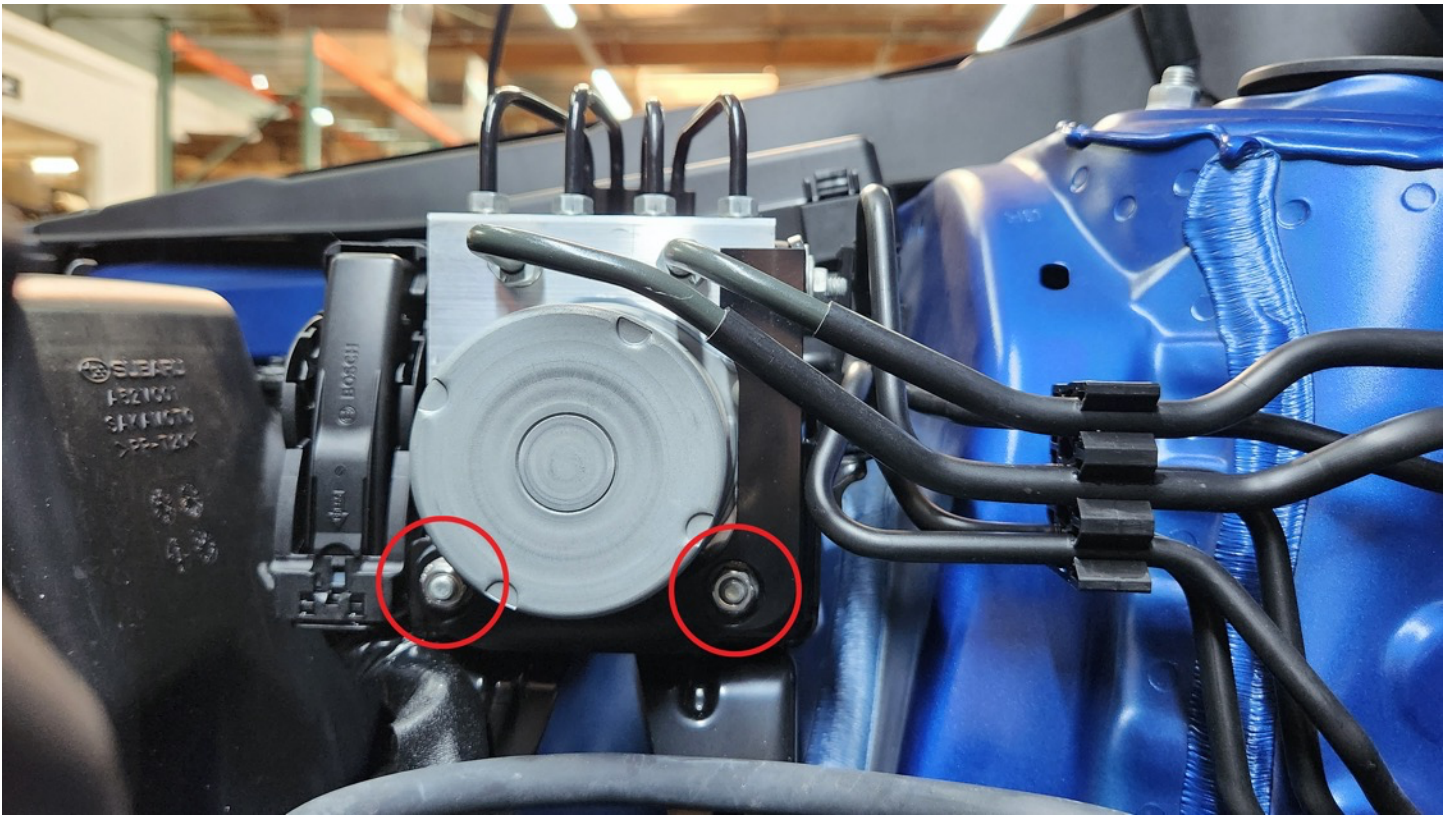

Then attach the upper bracket to the front of the 4 bolts on the top of BMS catch can and then bolt the upper bracket and can to the lower bracket with the included bolts.



Now connect the hoses using the factory clams on the engine and intake manifold. Pay special attention to which hoses are in and out. The BMS catch can is labeled on the top.



Put the intercooler and charge pipe back in and be sure the charge pipe clip snaps into place. Check all bolts.

Install complete! Empty the can every 3-6 months.